


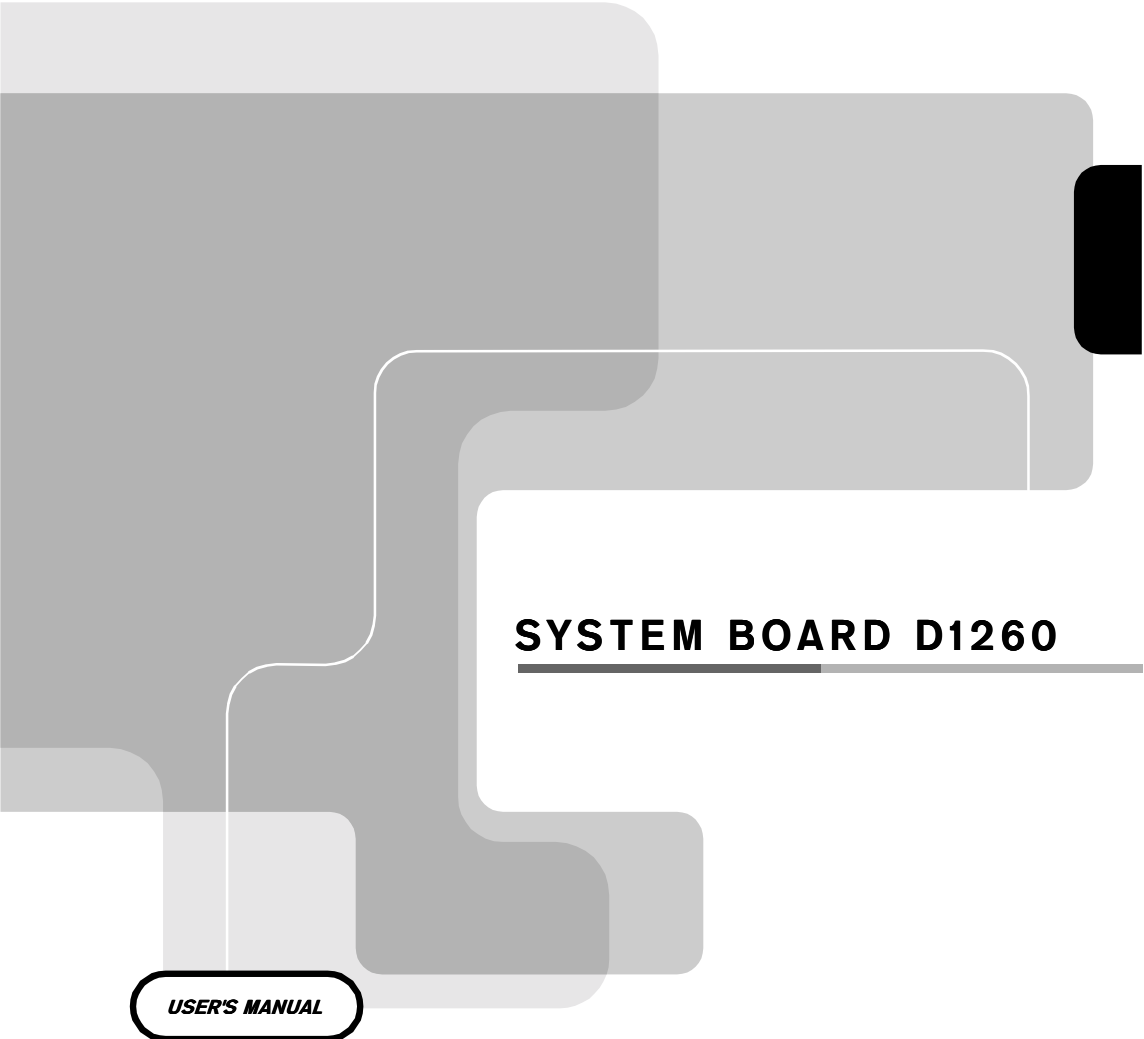

SYSTEM BOARD D1260

USER'S MANUAL

Are there ...

... any technical problems or other questions you would like to be clarified?

Please contact:

- your sales partner
- your sales outlet

You will find further information in the manual "Safety, Guarantee and Ergonomics".

The latest information on our products, tips, updates, etc., can be found on the Internet under:

<http://www.fujitsu-siemens.com>



Dieses Handbuch wurde auf Recycling-Papier gedruckt.
This manual has been printed on recycled paper.
Ce manuel est imprimé sur du papier recyclé.
Este manual ha sido impreso sobre papel reciclado.
Questo manuale è stato stampato su carta da riciclaggio.
Denna handbok är tryckt på recyclingpapper.
Dit handboek werd op recycling-papier gedrukt.

Herausgegeben von/Published by
Fujitsu Siemens Computers GmbH

Bestell-Nr./Order No.: **A26361-D1260-Z120-1-7619**
Printed in the Federal Republic of Germany
AG 1100 11/00



A26361-D1260-Z120-1-7619

SYSTEM BOARD D1260

User's Manual

November 2000 edition

Introduction

Features

Hardware Setup

BIOS Setup

Copyright © Fujitsu Siemens Computers GmbH 2000

Intel, Pentium and Celeron are registered trademarks and MMX and OverDrive are trademarks of Intel Corporation, USA.

Microsoft, MS, MS-DOS and Windows are registered trademarks of Microsoft Corporation.

PS/2 and OS/2 Warp are registered trademarks of International Business Machines, Inc.

All other trademarks referenced are trademarks or registered trademarks of their respective owners, whose protected rights are acknowledged.

All rights, including rights of translation, reproduction by printing, copying or similar methods, even of parts are reserved.

Offenders will be liable for damages.

All rights, including rights created by patent grant or registration of a utility model or design, are reserved. Delivery subject to availability.

Right of technical modification reserved.

This manual was produced by
cognitas. Gesellschaft für Technik-Dokumentation mbH
www.cognitas.de

CONTENTS

1. INTRODUCTION	5
1.1 How This Manual Is Organized	5
1.2 Item Checklist	5
2. FEATURES	8
2.1 CUR-DLSR Motherboard	6
2.1.1 Specifications	6
2.1.2 Performance	8
2.1.3 Intelligence	9
2.2 CUR-DLS Motherboard Components	10
2.2.1 Component Locations	11
3. HARDWARE SETUP	12
3.1 CUR-DLSR Motherboard Layout	12
3.2 Layout Contents	13
3.3 Hardware Setup Procedure	14
3.4 Motherboard Settings	14
3.5 System Memory	15
3.5.1 SDRAM Configurations	15
3.5.2 DIMM Installation	16
3.6 Central Processing Unit (CPU)	17
3.7 Expansion Cards	18
3.7.1 Expansion Card Installation Procedure	18
3.7.2 Assigning IRQs for Expansion Cards	19
ISA Interrupt (IRQ) Assignments	19
PCI Interrupt (IRQ) Assignments	19
3.8 Ports and Connectors	20
SCSI Connection Notes	32
3.9 Switches	33
3.10 Starting Up the First Time	35
Award BIOS Beep Codes	35
4. BIOS SETUP	37
4.1 Managing and Updating Your BIOS	37
4.1.1 Upon First Use of the Computer System	37
4.1.2 Updating BIOS Procedures	38
4.2 BIOS Setup Program	40
4.2.1 BIOS Menu Bar	41
4.2.2 Legend Bar	41

CONTENTS

4.3	Main Menu	43
4.3.1	Primary & Secondary Master/Slave	44
4.3.2	Keyboard Features	47
4.4	Advanced Menu	49
4.4.1	Chip Configuration	50
4.4.2	I/O Device Configuration	51
4.4.3	PCI Configuration	52
4.4.4	Shadow Configuration	54
4.5	Power Menu	55
4.5.1	Power Up Control	57
4.5.2	Hardware Monitor	59
4.6	Boot Menu	60
4.7	Exit Menu	62

FCC & DOC COMPLIANCE

Federal Communications Commission Statement

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with manufacturer's instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING! Any changes or modifications to this product not expressly approved by the manufacturer could void any assurances of safety or performance and could result in violation of Part 15 of the FCC Rules.

Reprinted from the Code of Federal Regulations #47, part 15.193, 1993. Washington DC: Office of the Federal Register, National Archives and Records Administration, U.S. Government Printing Office.

Canadian Department of Communications Statement

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

1. INTRODUCTION

1.1 How This Manual Is Organized

This manual is divided into the following sections:

1. INTRODUCTION	Manual information and checklist
2. FEATURES	Product information and specifications
3. HARDWARE SETUP	Instructions on setting up the motherboard.
4. BIOS SETUP	Instructions on setting up the BIOS
5. SOFTWARE SETUP	Instructions on setting up the included software
6. SOFTWARE REFERENCE	Reference material for the bundled software
7. APPENDIX	Optional items and general reference

CUR-DLSR means **Coppermine RCC Dual LAN SCSI Rack**.

2. FEATURES

2.1 D1260 CUR-DLSR Motherboard

The D1260 CUR-DLSR motherboard is designed primarily for multi-server environments to optimize available space without sacrificing performance. Powered by dual Intel® Pentium® III processors, the CUR-DLSR efficiently complies with today's demand for a high-integration server.

2.1.1 Specifications

- **Latest Intel Processor Support**

Intel Pentium® III	133MHz FSB	Coppermine core	FC-PGA
Intel Pentium® III	100MHz FSB	Coppermine core	FC-PGA
- **Multi-Processor OS:** Supports multi-processor operating systems such as Windows NT/2000 and Linux when dual processors of the same type and speed are installed.
- **ServerWorks LE 3.0 Chipset:** Features the ServerWorks LE 3.0 North Bridge and RCC Open South Bridge. Supports PC133 SDRAM with ECC, dual peer to peer PCI buses, and 64-bit (66/33MHz) PCI bus speed.
- **Onboard Graphics:** Features ATI RAGE-XL PCI VGA controller that supports up to 4MB PC/100-compliant 10ns SDRAM for 1280x1024 and true color resolutions.
- **Smart Networking:** Features two Intel 82559 Fast-Ethernet LAN controllers that fully support Alert-On-LAN II (AOL-II) and 10BASE-T/100BASE-TX.
- **PC133 Memory Support:** Equipped with four Dual Inline Memory Module (DIMM) sockets that support up to 4GB of registered ECC SDRAMs (available in 64, 128, 256, 512MB, or 1GB densities).
- **SCSI Support:** Equipped with the LSI 53C1010-33 Ultra160/Ultra3 64-bit (33MHz) dual-channel SCSI controller supports up to 30 SCSI devices. BIOS configurable onboard SCSI terminations.
- **Standard IDE Support:** Comes with an onboard PCI Bus Master IDE controller with two connectors that support four IDE devices on two channels. Supports PIO Modes 3 and 4 IDE devices, such as DVD-ROM, CD-ROM, CD-R/RW, LS-120, and Tape Backup drives.
- **PCI Expansion Slot:** One 64-bit/33MHz PCI
- **USB Ports:** Two stacked USB connectors to provide for additional peripherals
- **SMBus:** Features the System Management Bus interface, which is used to physically transport commands and information between SMBus devices.

2. FEATURES

- **Wake-Up Support:** Supports Wake-On-LAN and Wake-On-Ring, and BIOS Wake-Up.
- **ISA Multi-I/O:** Provides two high-speed UART compatible serial ports and one parallel port with EPP and ECP capabilities.
- **Around-the-Clock Intrusion Detection:** Chassis intrusion circuitry can log chassis open events into LDSM. The onboard battery supports detection even when normal power is removed and through a new design, battery drain is even lower than the RTC used for keeping time!
- **Server Health Monitoring:** Provides an easy way to examine and manage system status information, such as CPU and system voltages, temperatures, and fan status through the onboard hardware ASIC.
- **Enhanced ACPI:** Programmable BIOS (Flash EEPROM), offering enhanced ACPI for Windows NT and Windows 2000 compatibility, and autodetection of most devices for virtually automatic setup.

2. FEATURES

2.1.2 Performance

- **UltraPerformance:** Onboard Ultra160/Ultra3 dual channel SCSI controller with two connectors that support 30 Ultra160/Ultra3 SCSI devices in two channels.
- **Dual Speeds:** CPU frequency can operate at either 133MHz or 100MHz depending on the CPU installed.
- **High-Speed Data Transfer Interface:** SCSI transfers using Ultra160/Ultra3 dual channel SCSI controller can handle rates up to 160MB/s or 80MB/s. Ultra160/Ultra3 is backward compatible with slower SCSI devices so that older SCSI devices are not wasted. (Ultra160/Ultra3 SCSI cables have twisted pairs compared to flat ribbon cables used in older SCSI standards.)
- **SDRAM Optimized Performance:** This motherboard supports PC133 “registered” Synchronous Dynamic Random Access Memory (SDRAM), which increases the data transfer rate to 1064MB/s max
- **ACPI Ready:** ACPI (Advanced Configuration and Power Interface) is also implemented on all smart series motherboards. ACPI provides more Energy Saving Features for future operating systems (OS) supporting OS Direct Power Management (OSPM) functionality. With these features implemented in the OS, PCs can be ready around the clock, yet satisfy all the energy saving standards. To fully utilize the benefits of ACPI, use an ACPI-supported OS, such as Windows 98.
- **Compliance:** Both the BIOS and hardware levels of the motherboard meet the stringent requirements for SDG2.0 certification. The new SDG2.0 requirements for systems and components are based on the following high-level goals: support for Plug and Play compatibility and power management for configuring and managing all system components, and 32-bit device drivers and installation procedures for Windows NT/2000. Color-coded connectors and descriptive icons make identification easy as required by PC 99.

2. FEATURES

2.1.3 Intelligence

- **Fan Status Monitoring and Alarm:** To prevent system overheat and system damage, the CPU, power supply, and system fans can be monitored for RPM and failure. All the fans are set for its normal RPM range and alarm thresholds.
- **Temperature Monitoring and Alert:** To prevent system overheat and system damage, this motherboard supports processor thermal sensing and auto-protection.
- **Voltage Monitoring and Alert:** System voltage levels are monitored to ensure stable current to critical motherboard components. Voltage specifications are more critical for future processors, so monitoring is necessary to ensure proper system configuration and management.
- **System Resources Alert:** Today's server operating systems, such as Windows NT and Windows 2000, require much more memory and hard drive space to present enormous user interfaces and run large applications. The onboard hardware ASIC in conjunction Intel LDSM warns the user before the system resources are used up to prevent possible application crashes. Suggestions will give the user information on managing their limited resources more efficiently.
- **Remote Ring On (requires modem):** This allows a computer to be turned on remotely through an internal or external modem. With this benefit on-hand, users can access any information from their computers from anywhere in the world.
- **Alert-on-LAN II (requires optional hardware component):** Part of Wired for Management to enable IT staff to remotely respond to and resolve system trouble that decreases down time and lower total cost of ownership. Remote management response via remote diagnostics and troubleshooting work even when the operating system has frozen. Remote power down for power management. Asset tracking and monitoring through features like presence ping and logoff notification.

2. FEATURES


2.2 CUR-DLSR Motherboard Components

See opposite page for locations.

	Location
Processor Support	(2) Socket 370 for Pentium III Processors 2
Chipsets	ServerWorks ServerSet LE 3.0 North Bridge 3
	ServerWorks Open South Bridge 13
	4Mbit Flash ROM 18
	Super I/O Chipset 14
	Integrated Graphics Controller 17
Memory	Maximum 4GB support for PC133 registered SDRAM
	(4) DIMM Sockets 5
	Onboard VGA Memory 16
Expansion Slots	(1) 64-bit 33MHz PCI 20
	(2) ASMS Connectors 11, 15
System I/O	(1) Floppy Disk Drive Connector 10
	(2) IDE Connectors 6, 7
	(1) Parallel Port (Top) 23
	(1) Serial Port (Bottom left) 23
	(2) RJ-45 Fast-Ethernet Port 22
	(2) USB Ports 24
	(1) PS/2 Mouse Connector (Top) 25
	(1) PS/2 Keyboard Connector (Bottom) 25
	(1) VGA Monitor Connector (Bottom right) 23
Network Features	Intel 82559 Fast-Ethernet Controller 21
	Wake-On-LAN Connector (see layout on next page)
	Wake-On-Ring Connector (see layout on next page)
Hardware Monitoring	System Voltage Monitoring (integrated in ASIC) 1
	(4) Fan Power & Speed Monitoring Connectors (see layout on next page)
Power	ATX Power Supply Connector 4
CMOS Battery	Lithium CR2032 3V 19
Special Feature	LSI 64-bit (66/33MHz) Ultra160 / Ultra3 dual channel
	SCSI controller 12
	Onboard SCSI Connectors 8, 9
Form Factor	Full-size AT

2. FEATURES


2.2.1 Component Locations

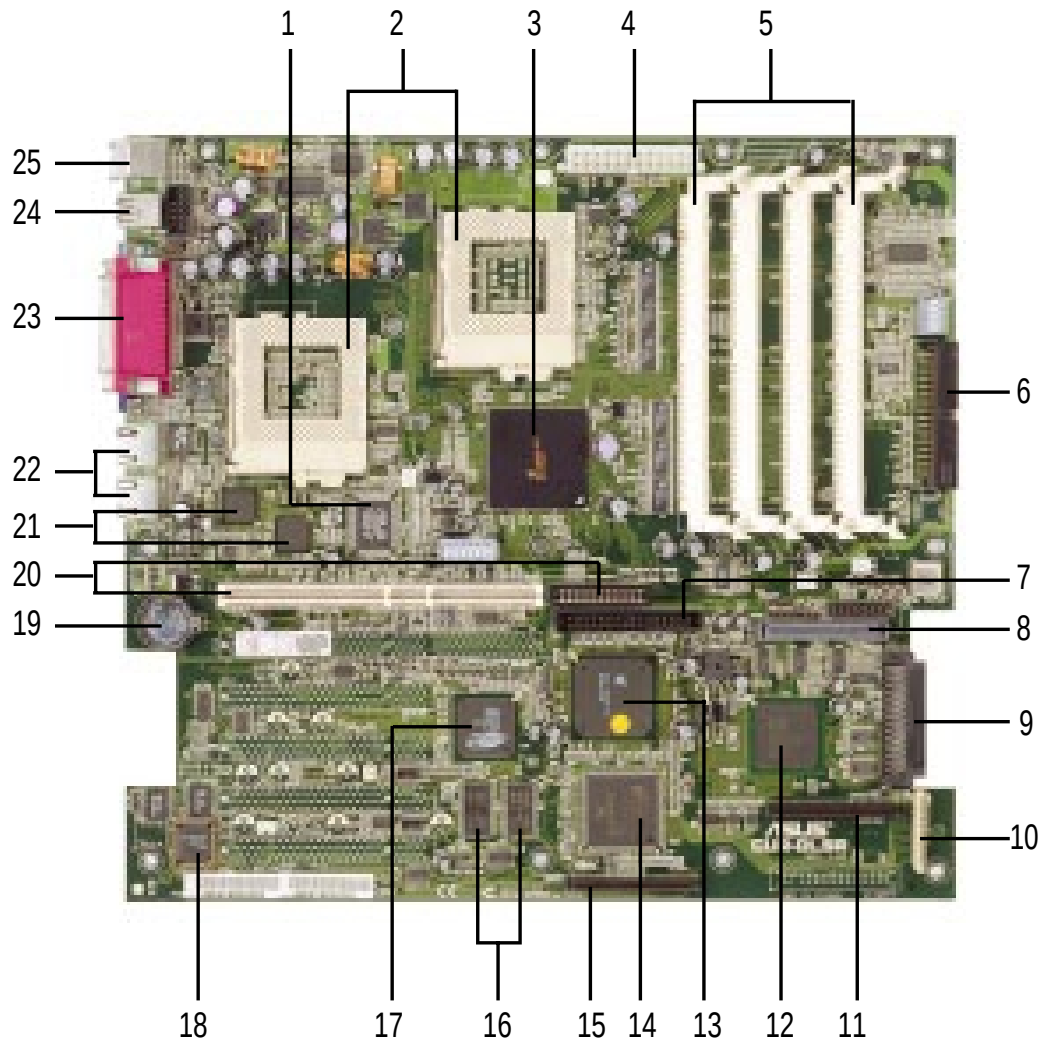

2. FEATURES
Component Location

3. HARDWARE SETUP

3.1 CUR-DLS Motherboard Layout

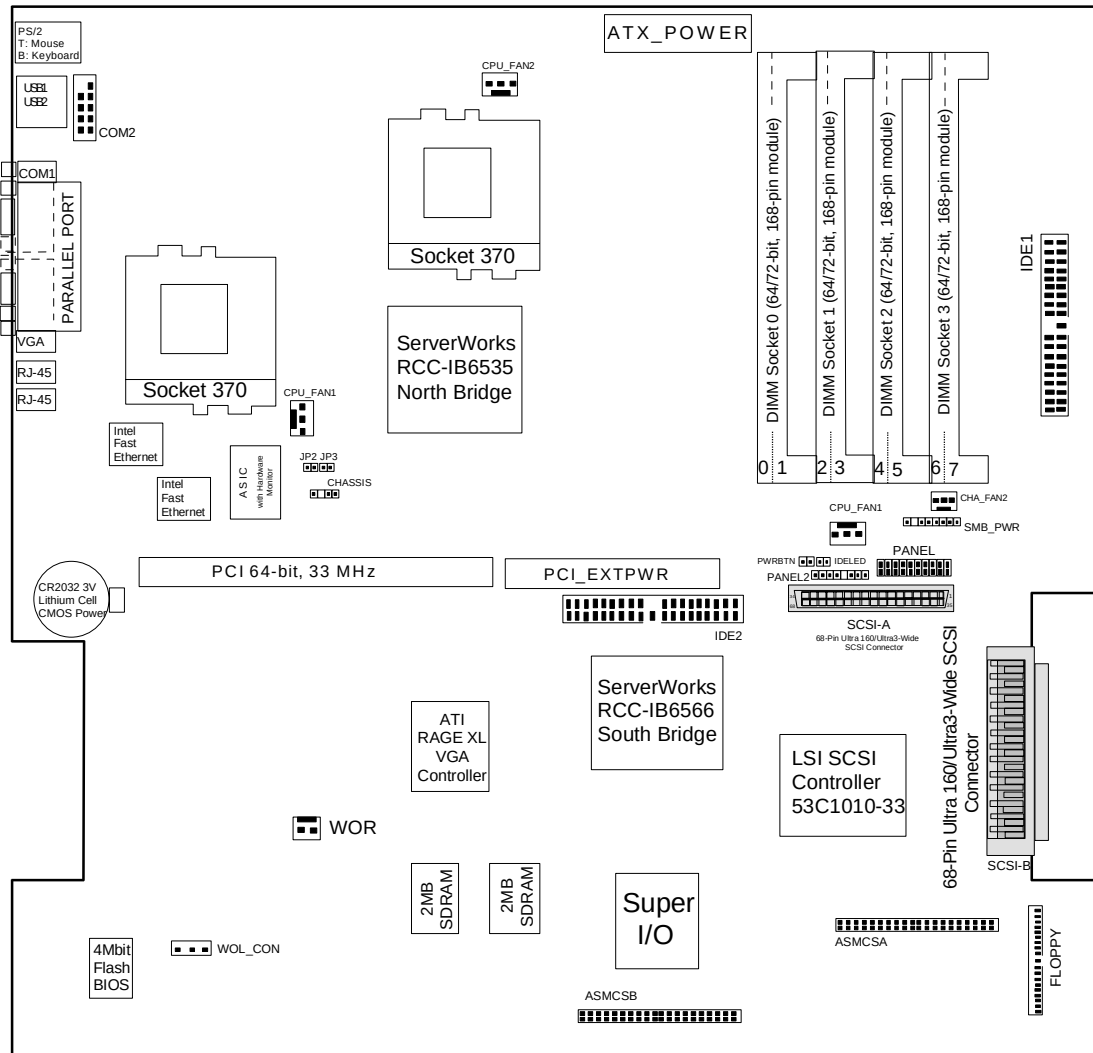

3. HARDWARE SETUP

3.2 Layout Contents

Expansion Slots

- | | |
|-----------------|------------------------------------|
| 1) DIMM 0/1/2/3 | p.18 168-Pin System Memory Support |
| 2) CPU | p.19 Central Processing Unit (CPU) |
| 3) PCI | p.20 64-bit PCI Bus Expansion Slot |

Connectors

- | | |
|---------------------------|---|
| 1) PS2KBMS | p.22 PS/2 Mouse Connector (6-pin female) |
| 2) PS2KBMS | p.22 PS/2 Keyboard Connector (6-pin female) |
| 3) USB | p.23 Universal Serial Bus Ports 0 & 1 (two 4-pin female) |
| 4) LAN | p.23 Fast-Ethernet Connector (RJ45) |
| 5) PRINTER | p.23 Parallel Port Connector (25-pin female) |
| 6) COM1 | p.24 Serial Port COM1 Connector (9-pin male) |
| 7) VGA | p.24 Monitor (VGA) Output Connector (15-pin female) |
| 8) FLOPPY | p.24 Floppy Disk Drive Connector (34-1 pins) |
| 9) IDE1/IDE2 | p.25 Primary/Secondary IDE Connectors (Two 40-1 pins) |
| 10) WOL_CON | p.26 Wake-On-LAN Connector (3 pins) |
| 11) WOR | p.26 Wake-On-Ring Connector (2 pins) |
| 12) IDELED | p.27 IDE/SCSI Activity LED (2 pins) |
| 13) CPU_FAN1/2,CHA_FAN1/2 | p.27 CPU and Chassis Fan Connectors (Four 3-pin) |
| 14) SMB | p.28 SMBus Connector (5-1 pins) |
| 15) NIC (PANEL) | p.28 NIC Activity LED (2 pins) |
| 16) STATUS (PANEL) | p.28 Status Activity LED (2 pins) |
| 17) SMI (PANEL) | p.28 System Management Interrupt Switch Lead (2 pins) |
| 18) PWRSW (PANEL) | p.29 ATX Power Switch/Soft Off Lead (2 pins) |
| 19) RESET (PANEL) | p.29 Reset Switch Lead (2 pins) |
| 20) PWR.LED (PANEL) | p.29 System Power LED Lead (3-1 pins) |
| 21) NMI (PANEL) | p.29 Non-Mask Interrupt Switch (2 pins) |
| 22) SPEAKER (PANEL) | p.29 System Warning Speaker Connector (4 pins) |
| 23) IDELED (PANEL) | p.29 IDE/SCSI Activity LED (2 pins) |
| 24) ATXPWR | p.30 ATX Power Connector (20 pins) |
| 25) SCSI-A/SCSI-B | p.31 68-pin Ultra160/Ultra3 SCSI Connectors (two 68 pins) |

3. HARDWARE SETUP

3.3 Hardware Setup Procedure

Before using your computer, you must complete the following steps:

- **Check Motherboard Settings**
- **Install Memory Modules**
- **Install the Central Processing Unit (CPU)**
- **Install Expansion Cards**
- **Connect Ribbon Cables, Panel Wires, and Power Supply**

3.4 Motherboard Settings

WARNING! Computer motherboards and expansion cards contain very delicate Integrated Circuit (IC) chips. To protect them against damage from static electricity, you should follow some precautions whenever you work on your computer.

1. Unplug your computer when working on the inside.
2. Use a grounded wrist strap before handling computer components. If you do not have one, touch both of your hands to a safely grounded object or to a metal object, such as the power supply case.
3. Hold components by the edges and try not to touch the IC chips, leads or connectors, or other components.
4. Place components on a grounded antistatic pad or on the bag that came with the component whenever the components are separated from the system.
5. Ensure that the ATX power supply is switched off before you plug in or remove the ATX power connector on the motherboard.

3. HARDWARE SETUP

3.5 System Memory

NOTE: No hardware or BIOS setup is required after adding or removing memory. This motherboard uses only Dual Inline Memory Modules (DIMMs). Sockets are available for **3.3Volt** (power level) “registered” Synchronous Dynamic Random Access Memory (SDRAM) of 64, 128, 256, 512, 1024MB with Serial Presence Detect (SPD). ECC memory modules must be used to provide reliability enhancements.

Memory speed setup is recommended through the **SDRAM Configuration** in **4.4.1 Chip Configuration**.

IMPORTANT: This motherboard chipset only supports 64Mbit, 128Mbit, and 256Mbit “registered” SDRAMs with ECC. This motherboard only operates using synchronous data transfers to the memory. When you use a processor with 100MHz FSB, it will require that the memory supports 100MHz. **When you use a processor with 133MHz FSB, it requires that the memory supports 133MHz, otherwise bootup may not be possible.**


3.5.1 SDRAM Configurations

Technology	Configuration	Module	# Chips	Memory (MB)
64Mbit	8M x 8	Single-Sided	9	64
		Double-Sided	18	128
64Mbit	16M x 4	Double-Sided	18	128
		Double-Sided & Stacked	36	256
128Mbit	32M x 4	Double-Sided	18	256
		Double-Sided & Stacked	36	512
128Mbit	16M x 8	Single-Sided	9	128
		Double-Sided	18	256
256Mbit	32M x 8	Single-Sided	9	128
		Double-Sided	18	256
256Mbit	64M x 4	Single-Sided	18	512
		Double-Sided & Stacked	36	1024


3. HARDWARE SETUP

3.5.2 DIMM Installation

Insert the module(s) as shown. Because the number of pins are different on either side of the breaks, the module only fits in the orientation shown. DIMMs are longer and have different pin contacts on each side and therefore have a higher pin density compared to SIMMs.

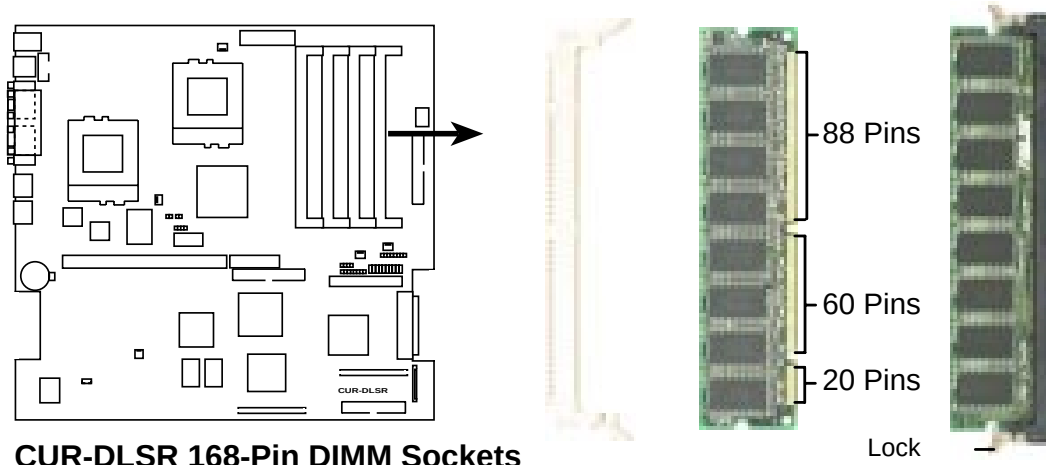

The DIMMs must be **3.3V** “registered” for this motherboard. To determine the DIMM type, check the notches on the DIMMs (see figure below).

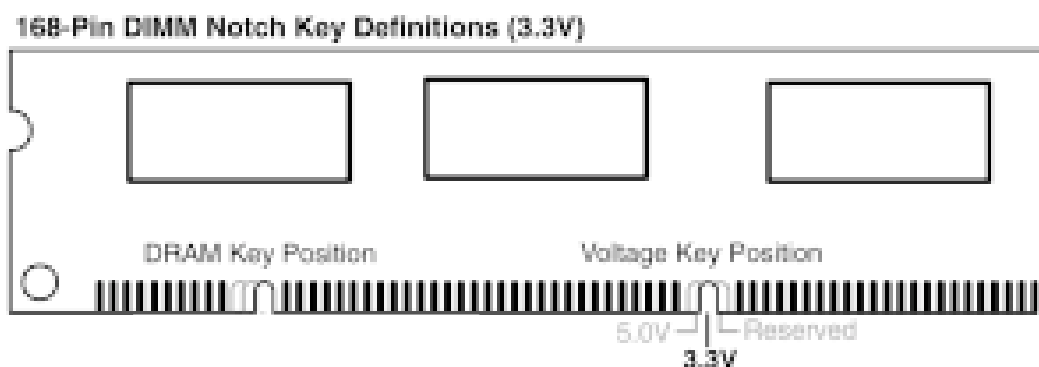

The notches on the DIMM shift between left, center, or right to identify the type and also to prevent the wrong type from being inserted into the DIMM slot on the motherboard. Ask your retailer the correct DIMM type before purchasing.

3. HARDWARE SETUP

3.6 Central Processing Unit (CPU)

The motherboard has a PGA 370 socket.


WARNING! Be sure that there is sufficient air circulation across the processor heatsink by regularly checking that your CPU fan is working. Without sufficient circulation, the processor could overheat and damage both the processor and the motherboard. **The CPU will be unstable if the heatsink is not properly mounted. Double check the contact.**

To install a CPU, first turn off the system and remove its cover. Locate the CPU socket and open it by first lifting the lever to a 90-degree angle. Carefully insert the CPU with the correct orientation as shown. The notched corner should point towards the end of the lever. Because the CPU has a corner pin for two of the four corners, the CPU will only fit in the orientation as shown. The picture is for reference only.

Once completely inserted, pull down the socket lever while holding down the CPU. Next, install the specified heatsink.

NOTE: The motherboard automatically sets the correct Bus Frequency and Multiple for the processor. PGA370 processors provide internal thermal sensing that a socket mounted thermal resistor is not needed.

CAUTION! Be careful not to scrape the motherboard when mounting a clamp-style processor heatsink or else damage may occur to the motherboard.

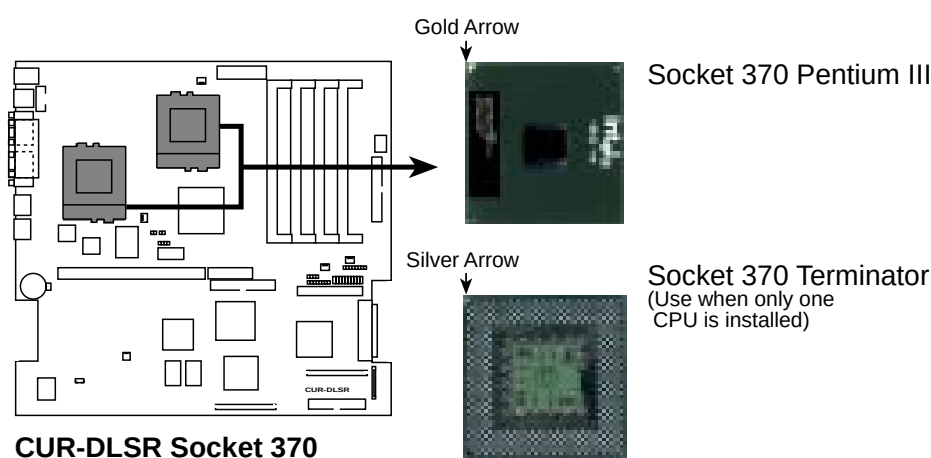

IMPORTANT: An optional CPU terminator is required when installing only one CPU.


3. HARDWARE SETUP

3.7 Expansion Cards

WARNING! Unplug your power supply when adding or removing expansion cards or other system components. Failure to do so may cause severe damage to both your motherboard and expansion cards.

3.7.1 Expansion Card Installation Procedure

1. Read the documentation for your expansion card and make any necessary hardware or software settings for your expansion card, such as jumpers.
2. Remove your computer system cover and the bracket plate on the expansion slot. Keep the bracket for possible future use.
3. Lift the locking tab on top of the slot. If you are installing a long expansion card, lift the metal card guide also. This card guide is located on the bracket near the chassis fans.
4. Detach the riser card from the PCI card slot on the motherboard.
5. Carefully insert the golden fingers of the expansion card into the connector on the riser card.
6. Align the card bracket to the slot opening at the back of the system unit while inserting the end of the bracket to the slot holding tab.
7. Insert the golden fingers of the riser card to the PCI slot on the motherboard until it fits in place.
8. Press down the locking tab at the top of the expansion slot to secure the card.
9. If you installed a long expansion card, pull down the metal card guide and fit it to the other end of the card to hold the card in place.
10. Install the necessary software drivers for your expansion card.

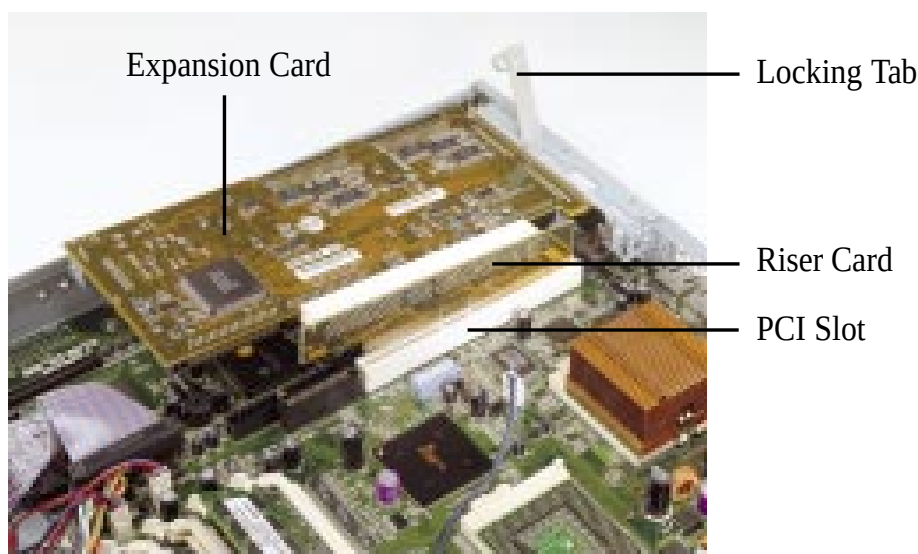

3. HARDWARE SETUP

3.7.2 Assigning IRQs for Expansion Cards

This is applicable only when MPS 1.4 Support is Disabled in section 4.6 Boot Menu.

Some expansion cards need an IRQ to operate. Generally, an IRQ must be exclusively assigned to one use. In a standard design, there are 16 IRQs available but most of them are already in use, leaving 6 IRQs free for expansion cards. If the motherboard has **PCI** audio onboard, an additional IRQ will be used. If the motherboard also has **MIDI** enabled, another IRQ will be used, leaving 4 IRQs free.

The following table lists the default IRQ assignments for standard PC devices. Use this table when configuring your system and for resolving IRQ conflicts.

ISA Interrupt (IRQ) Assignments

ISA INT	Priority	Standard Function
ISA 00	1	System Timer
ISA 01	2	Keyboard Controller
ISA 02	N/A	Programmable Interrupt
ISA 03*	11	Communications Port (COM2)
ISA 04*	12	Communications Port (COM1)
ISA 05*	13	Sound Card (sometimes LPT2)
ISA 06	14	Floppy Disk Controller
ISA 07*	15	Printer Port (LPT1)
ISA 08	3	System CMOS/Real Time Clock
ISA 09*	4	ACPI Mode when used
ISA 10*	5	IRQ Holder for PCI Steering
ISA 11*	6	IRQ Holder for PCI Steering
ISA 12*	7	PS/2 Compatible Mouse Port
ISA 13	8	Numeric Data Processor
ISA 14*	9	Primary IDE Channel
ISA 15*	10	Secondary IDE Channel

*These IRQs are usually available for PCI devices.

PCI Interrupt (IRQ) Assignments

PCI Slot	PCI INTA	PCI INTB	PCI INTC	PCI INTD
64-bit	PCI 0	PCI 3	PCI 4	PCI 5

3. HARDWARE SETUP

3.8 Ports and Connectors


WARNING! Some pins are used for connectors or power sources. These are clearly distinguished from jumpers in the Motherboard Layout. Placing jumper caps over these connector pins may damage your motherboard.

IMPORTANT: Ribbon cables should always be connected with the red stripe to Pin 1 on the connectors. Pin 1 is usually on the side closest to the power connector on hard drives and CD-ROM drives, but may be on the opposite side on floppy disk drives. Check the connectors before installation because there may be exceptions. IDE ribbon cable must be less than 46 cm (18 in.), with the second drive connector no more than 15 cm (6 in.) from the first connector.

1) PS/2 Mouse Port (Green 6-pin PS2KBMS)


The system will direct IRQ12 to the PS/2 mouse if one is detected. If one is not detected, expansion cards can use IRQ12. See **PS/2 Mouse Function Control** in **4.4 Advanced Menu**.

PS/2 Mouse (6-pin Female)

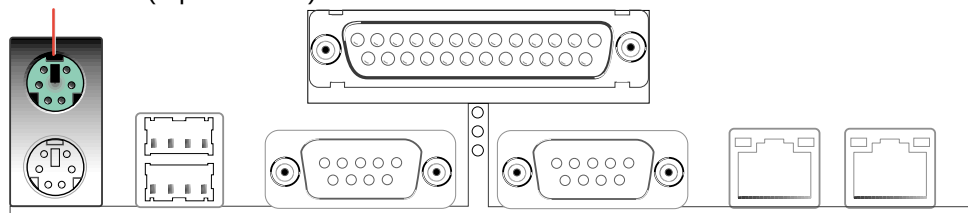

2) PS/2 Keyboard Port (Purple 6-pin PS2KBMS)

This connection is for a standard keyboard using an PS/2 plug (mini DIN). **This connector does not allow standard AT size (large DIN) keyboard plugs. You may use a DIN to mini DIN adapter on standard AT keyboards.**

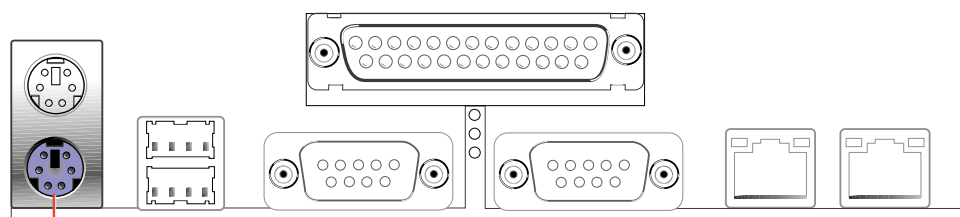


PS/2 Keyboard (6-pin Female)

3. HARDWARE SETUP


3) Universal Serial BUS Ports 0 & 1 (Black two 4-pin USB)

Two USB ports are available for connecting USB devices.

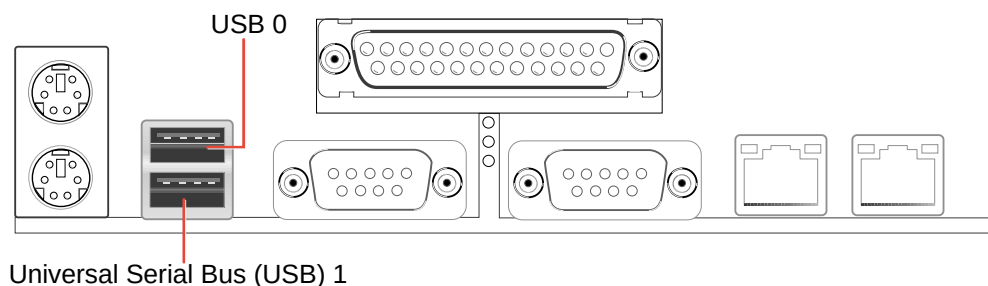


4) Fast-Ethernet Port (RJ-45)

The RJ45 connector is optional at the time of purchase and is located on top of the USB connectors. The connector allows the motherboard to connect to a Local Area Network (LAN) through a network hub.

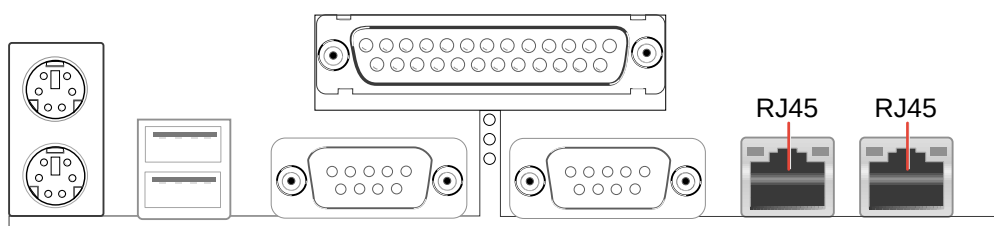

5) Parallel Port (Burgundy 25-pin PRINTER)


You can enable the parallel port and choose the IRQ through **Onboard Parallel Port** (see 4.4.2 *I/O Device Configuration*).

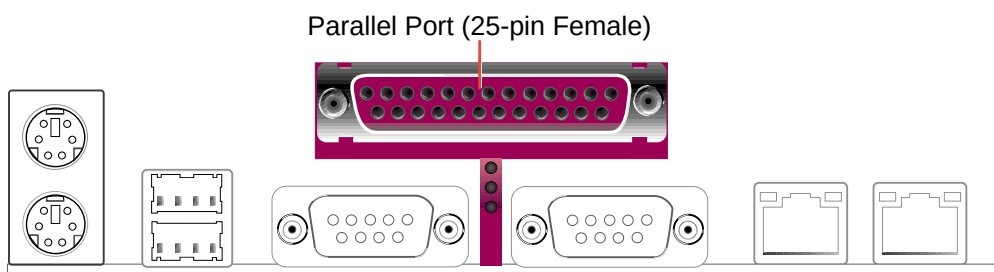

3. HARDWARE SETUP


6) Serial Port (Teal/Turquoise 9-pin COM1)

The serial port can be used for pointing devices or other serial devices. See **Onboard Serial Port 1** in **4.4.2 I/O Device Configuration** for settings.

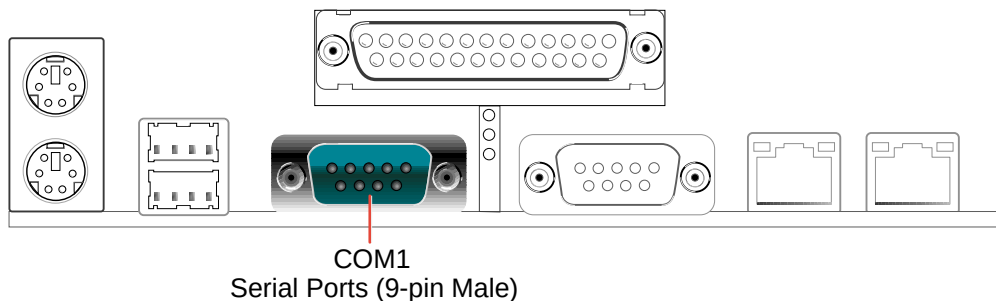


7) Monitor Output Port (Blue 15-pin VGA)

This connector is for output to a VGA-compatible device.

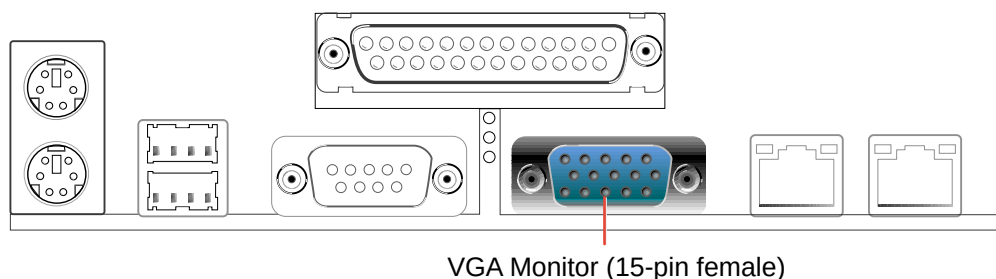

8) Floppy Disk Drive Connector (34-1 pin FLOPPY)

This connector supports the provided floppy drive ribbon cable. After connecting the single end to the board, connect the two plugs on the other end to the floppy drives. **(Pin 5 is removed to prevent inserting in the wrong orientation when using ribbon cables with pin 5 plugged).**

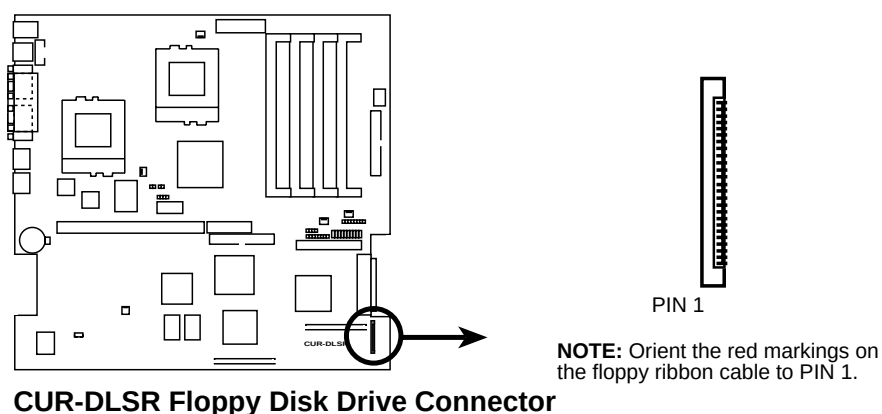


3. HARDWARE SETUP

9) Primary/ Secondary IDE Connectors (40-1 pin IDE1/IDE2)

These connectors support the provided IDE ribbon cable. Connect the cable's blue connector to the motherboard's primary (recommended) or secondary IDE connector, and then connect the gray connector to the IDE slave device (hard disk drive) and the black connector to the IDE master device. It is recommended that non-UltraDMA/33 devices be connected to the secondary IDE connector. If you install two hard disks, you must configure the second drive to Slave mode by setting its jumper accordingly. Refer to your hard disk documentation for the jumper settings. BIOS now supports specific device bootup (see **Boot Sequence** in **4.6 Boot Menu**). **(Pin 20 is removed to prevent inserting in the wrong orientation when using ribbon cables with pin 20 plugged).**

TIP: You may configure two hard disks to be both Masters with two ribbon cables – one for the primary IDE connector and another for the secondary IDE connector. You may install one operating system on an IDE drive and another on a SCSI drive and select the boot disk through **Boot Sequence** in **4.6 Boot Menu**.

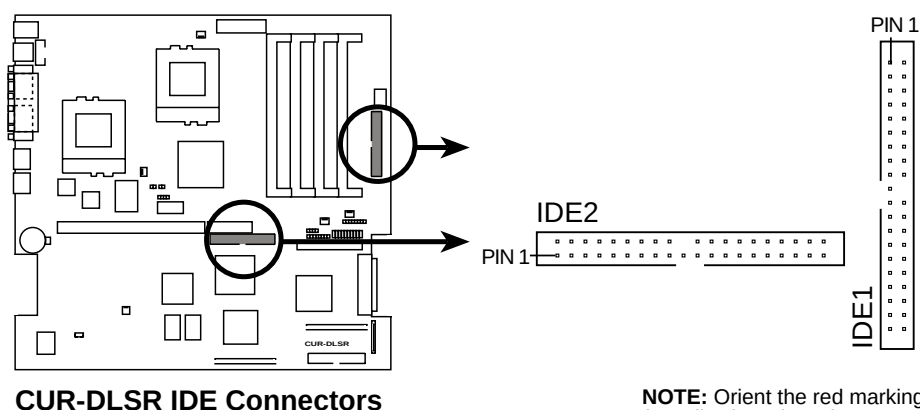


NOTE: Orient the red markings (usually zigzag) on the IDE ribbon cable to PIN 1.

3. HARDWARE SETUP

10) Wake-On-LAN Connector (3-pin WOL_CON)

This connector connects to a LAN card with a Wake-On-LAN output, such as the PCI-L101 Ethernet card (see 7. **APPENDIX**). The connector powers up the system when a wakeup packet or signal is received through the LAN card.


IMPORTANT: This feature requires that **Wake On LAN** is enabled (see 4.5.1 **Power Up Control**) and that your system has an ATX power supply with at least 720mA +5V standby power.

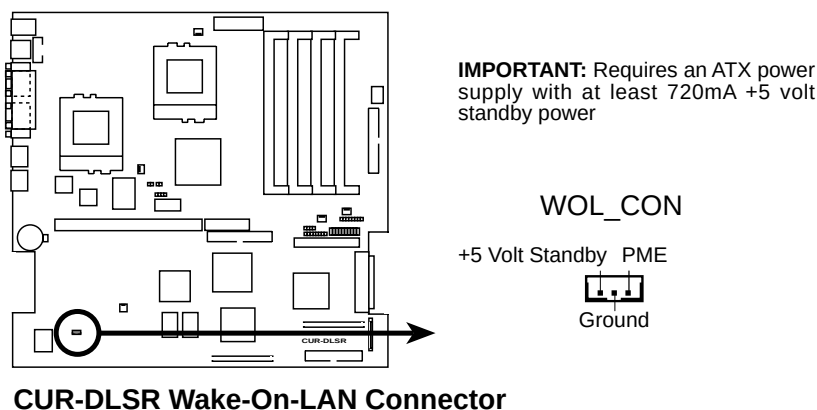

11) Wake-On-Ring Connector (2-pin WOR)

This connector connects to internal modem cards with a Wake-On-Ring output. The connector powers up the system when a ringup packet or signal is received through the internal modem card. **NOTE:** For external modems, Wake-On-Ring is detected through the COM port.


IMPORTANT: This feature requires that **PCI Modem card** is enabled (see 4.5.1 **Power Up Control**) and that your system has an ATX power supply with at least 720mA +5V standby power.

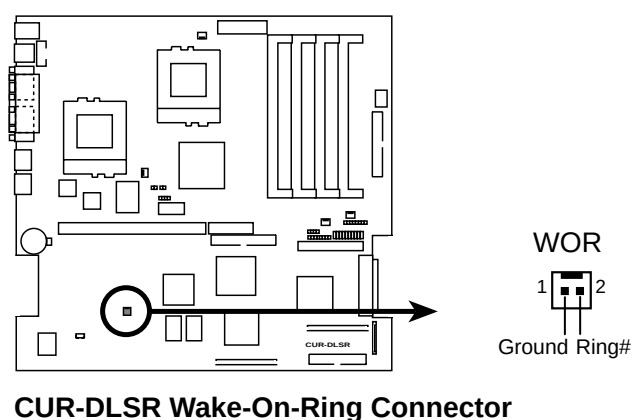

3. HARDWARE SETUP

12) IDE/SCSI Activity LED (2-pin IDELED) Also in Panel Connectors

This connector supplies power to the cabinet's activity LED. Read and write activity by devices connected to the Primary/Secondary IDE and SCSI connectors cause the LED to light up.

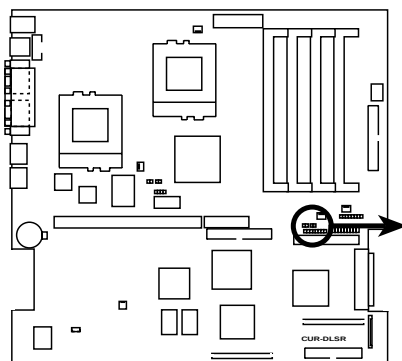

 *Same as the "HDD Access LED" in the panel connectors
+ -
IDELED


CUR-DLSR IDE Activity LED

13) CPU and Chassis Fan Connectors (3-pin CPU_FAN1/2, CHA_FAN1/2)

These connectors support cooling fans of 860mA (10.3 Watts) or less. Orient the fans so that the heat sink fins allow airflow to go across the onboard heat sink(s) instead of the expansion slots. Depending on the fan manufacturer, the wiring and plug may be different. The red wire should be positive, while the black should be ground. Connect the fan's plug to the board taking into consideration the polarity of the connector.

NOTE: The "Rotation" signal is to be used only by a specially designed fan with rotation signal. The Rotations per Minute (RPM) can be monitored using Intel LDSM Utility (provided with certain models).

WARNING! The CPU and/or motherboard will overheat if there is no airflow across the CPU and onboard heatsinks. Damage may occur to the motherboard and/or the CPU fan if these pins are incorrectly used. **These are not jumpers, do not place jumper caps over these pins.**

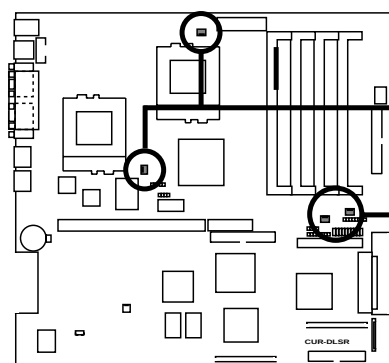

CPU_FAN1 / CPU_FAN2

Rotation
+12V
GND

GND
+12V
Rotation

CHA_FAN1 / CHA_FAN2


Rotation
+12V
GND

CUR-DLSR 12-Volt Cooling Fan Power

3. HARDWARE SETUP


14) SMBus Connector (8-1 pin SMB)

This connector allows you to connect SMBus (System Management Bus) devices. SMBus devices communicate by means of the SMBus with an SMBus host and/or other SMBus devices. SMBus is a specific implementation of an I²C bus, which is a multi-device bus; that is, multiple chips can be connected to the same bus and each one can act as a master by initiating data transfer.

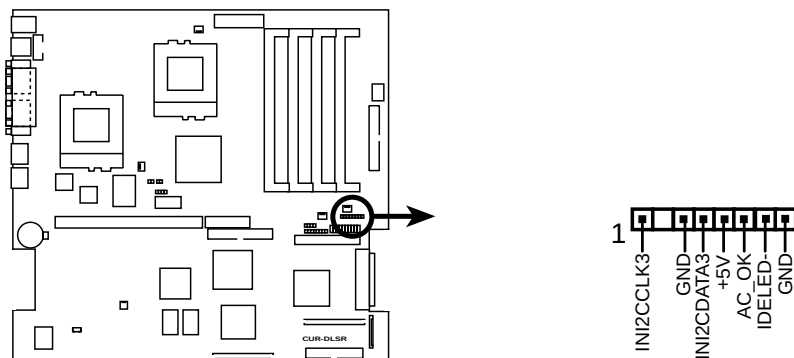

CUR-DLSR SMBus Power Connector

Refer to the following illustration for items 15-23.

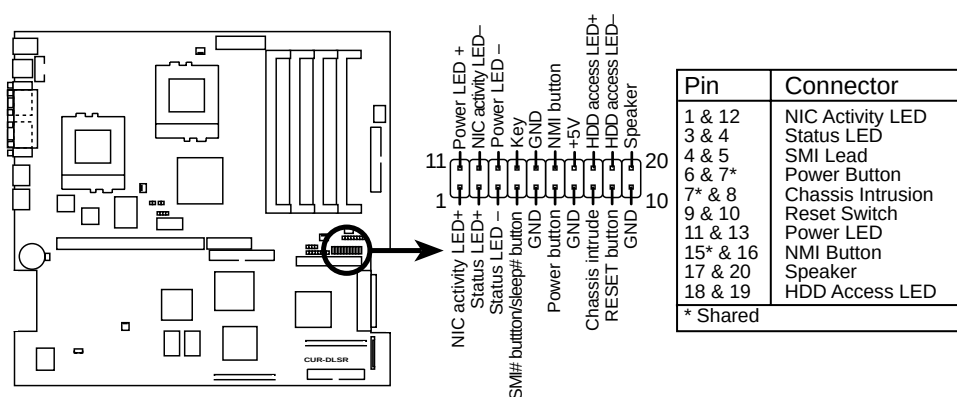

CUR-DLSR System Panel Connectors

15) NIC Activity LED (2-pin)

This shows the status of the NIC through a panel-mounted LED.

16) Status LED (2-pin)

This shows the system status as programmed through the ASIC.

17) System Management Interrupt Lead (2-pin)

This allows the user to manually place the system into a suspend mode or “Green” mode where system activity will be instantly decreased to save electricity and expand the life of certain components when the system is not in use. This 2-pin connector (see the preceding figure) connects to the case-mounted suspend switch.

3. HARDWARE SETUP

18) ATX Power Switch / Soft-Off Switch Lead (2-pin)

The system power is controlled by a momentary switch connected to this lead. Pushing the button once switches the system between ON and SLEEP or ON and SOFT OFF, depending on your BIOS or OS setting. Pushing the switch while in the ON mode for more than 4 seconds turns the system off. The system power LED shows the status of the system power.

19) Reset Switch Lead (2-pin)

This 2-pin connector connects to the case-mounted reset switch for rebooting your computer without having to turn off your power switch. This is a preferred method of rebooting to prolong the life of the system power supply.

20) System Power LED Lead (3-1 pin)

This 3-1 pin connector connects to the system power LED that lights up when the system is powered on and blinks when it is in sleep or soft-off mode. This feature can be programmed through the ASIC.

21) NMI Button (2-pin)

This 2-pin connector connects to a panel button to allow a non-mask interrupt command to be sent to the operating system.

22) System Warning Speaker Connector (4-pin)

This 4-pin connector connects to the case-mounted speaker.


23) IDE Activity LED (2-pin)

This connector supplies power to the IDE activity LED. Read and write activity by devices connected to the Primary or Secondary IDE connectors will cause the LED to light up.

3. HARDWARE SETUP


24) ASMC Connectors

This motherboard has two ASMC connectors.

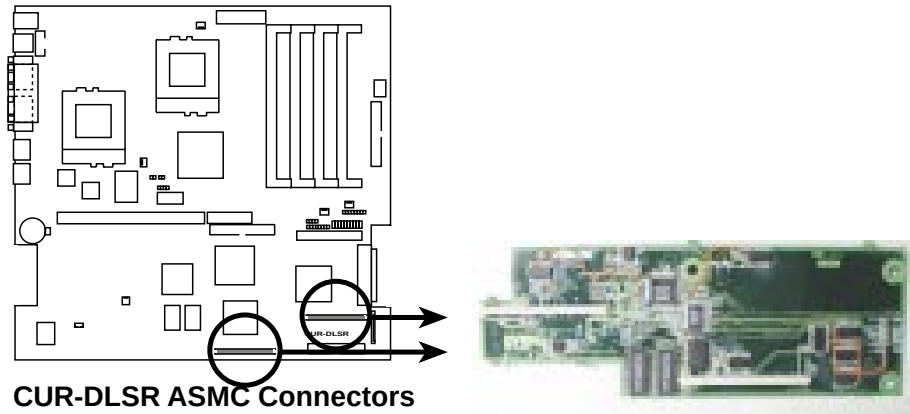

25) Serial Port 2 Connector


This motherboard has a second serial port connector to accommodate additional serial peripherals. See the BIOS section **4.4.2 I/O Device Configuration** to configure Serial Port 2 settings.

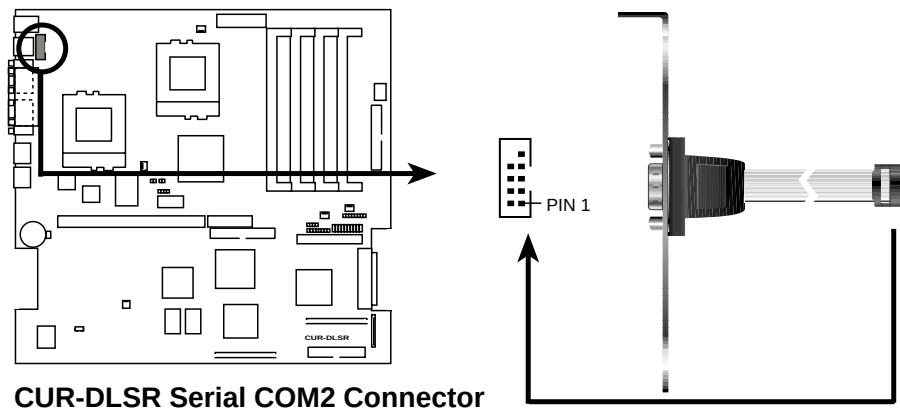

3. HARDWARE SETUP

26) Panel 2 Connector

This connector supports some of the functions in the 20-pin PANEL connector, such as the power button, IDE LED, and power LED.

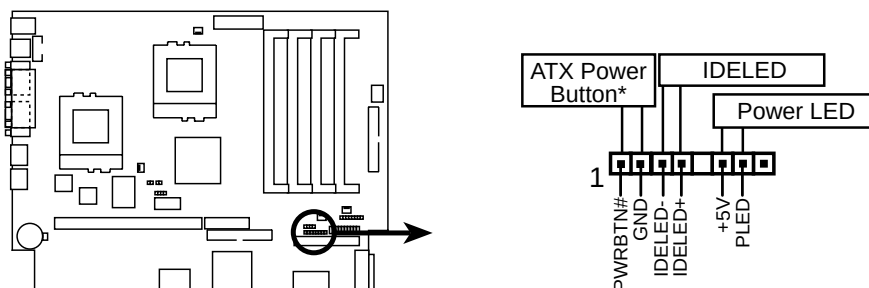


CUR-DLSR Panel 2 Connector

* Requires an ATX power supply.

27) Power Button Connector

This connector allows you to turn the system ON or OFF. The power LED lights up when the system is turned ON.


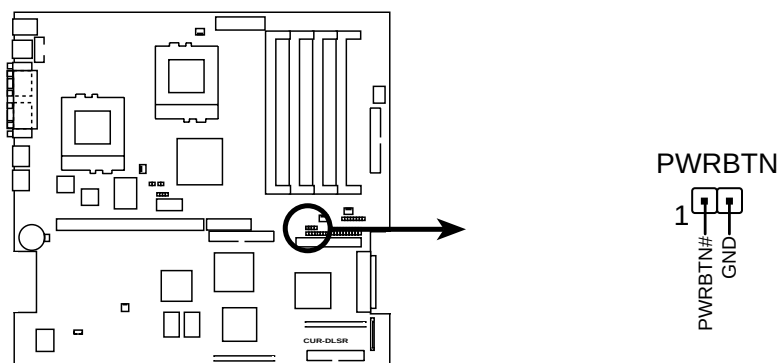


CUR-DLSR Power Button Connector

3. HARDWARE SETUP

28) Chassis Open Alarm Lead Connector

This connector is designed for chassis intrusion detection. When any chassis component is removed, the contact should open and the motherboard will record a chassis intrusion event. The event can be processed by software such as LDCM.

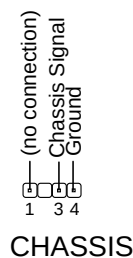
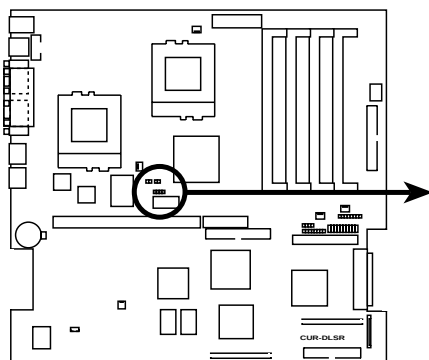


CUR-DLSR Chassis Open Alarm Lead

29) ATX Power Connector (20/24-pin block ATXPWR)

This connector connects to an ATX power supply. The plug from the power supply will only insert in one orientation because of the different hole sizes. Find the proper orientation and push down firmly making sure that the pins are aligned.

IMPORTANT: Make sure that your ATX power supply can supply at least 720mA on the +5-volt standby lead (+5VSB). You may experience difficulty in turning ON your system if your power supply cannot support the load.

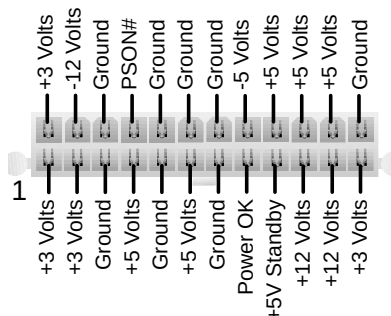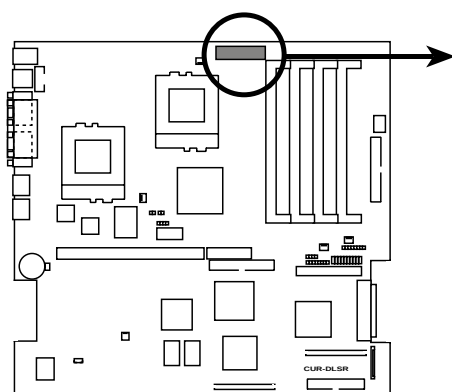


CUR-DLSR ATX Power Connector

3. HARDWARE SETUP

30) Two 68-pin Ultra160/Ultra3 SCSI Connectors

This motherboard has two 68-Pin Ultra160/Ultra3 SCSI connectors; one for each of the two channels. Each channel can support a maximum of 15 devices as specified by Ultra160/Ultra3 standards.

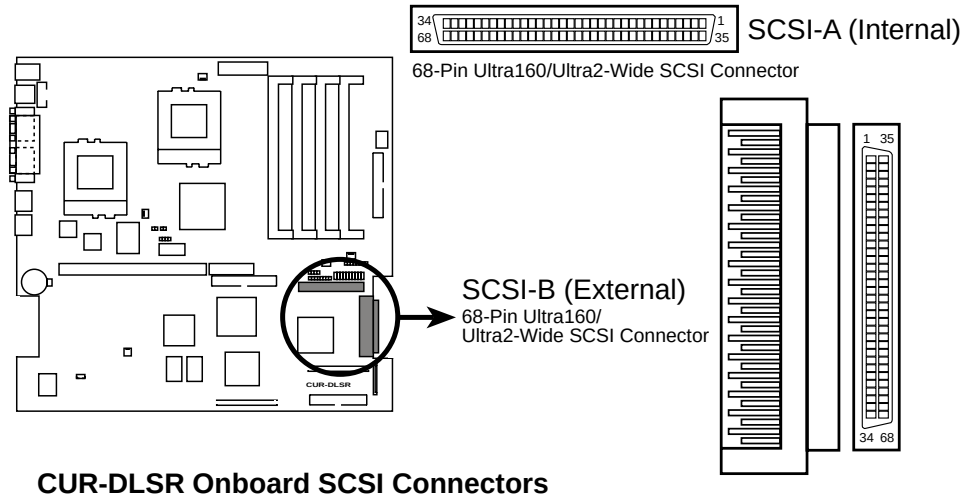


3. HARDWARE SETUP

SCSI Connection Notes

This motherboard has two 68-Pin Ultra160/Ultra3 SCSI connectors; one for each of the two channels.

The onboard SCSI chipset incorporates an advanced multimode I/O cell that supports both single-ended (SE), Ultra3, and Ultra160 devices. With Ultra160/Ultra3 devices, the SCSI bus platform performs at full Ultra160/Ultra3 speeds (up to 160MB/sec) and extended cabling 12m (or 25m in a point-to-point configuration). When an SE device is attached, the bus defaults to an SE speed and 1.5m cable length.

IMPORTANT: Connect SCSI devices as shown. Each channel should have only one type of SCSI standard (e.g. Ultra160, Ultra3, Ultra-Wide). Mixing SCSI devices on the same channel decreases performance of the slower device.

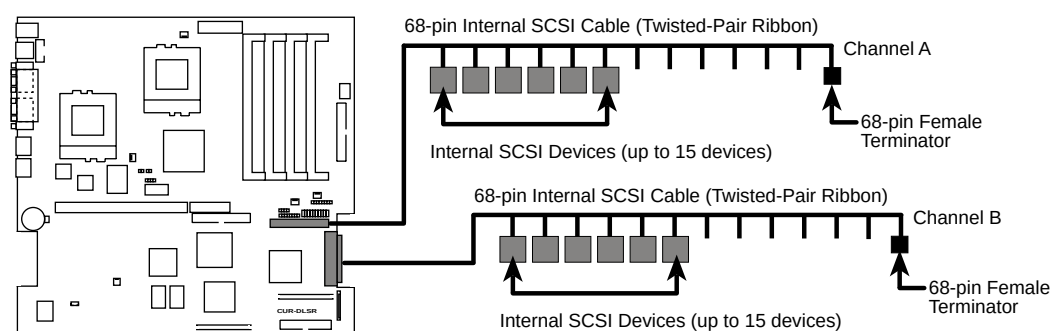

CUR-DLSR SCSI Connection Example

NOTE: Ultra160/Ultra3 SCSI devices do not have termination jumpers and must use a separate terminator on the last connector (internal) or device (external).


3. HARDWARE SETUP

3.9 Switches

Clear RTC RAM

These two solder points allow you to clear the RTC RAM in CMOS. You can clear the CMOS memory of date, time, and system setup parameters by erasing the CMOS Real Time Clock (RTC) RAM. The RAM data that include system setup information, such as system passwords, is powered by the onboard button cell battery.

To erase the RTC RAM: (1) Unplug your computer, (2) Short the solder points, (3) Turn ON your computer, (4) Hold down the <Del> key during bootup and enter BIOS setup to re-enter user preferences.

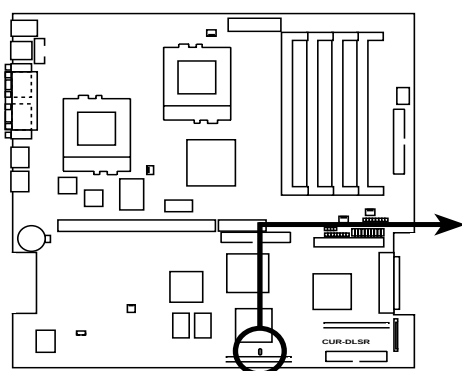

CUR-DLSR Clear RTC RAM

 R266
CLRRTC
Short solder points
to Clear CMOS

3. HARDWARE SETUP

3.10 Starting Up the First Time

1. After you have made all the connections, replace the system unit cover.
2. Be sure that all switches are off (in some systems, marked with ○), and the power input voltage is set to comply with the standard used in your country (220V-240V or 110-120V).
3. Connect the power supply cord into the power supply located at the back of your system unit according to the system user's manual.
4. Connect the power cord into a power outlet that is equipped with a surge protector.
5. You may then turn on your devices in the following order:
 - a. Your monitor
 - b. External SCSI devices (starting with the last device on the chain)
 - c. Your system power. For ATX power supplies, you need to switch on the power supply as well as press the ATX power switch on the front of the case.
6. The power LED on the front panel of the system case will light. For ATX power supplies, the system LED will light when the ATX power switch is pressed. The LED on the monitor may light up or switch between orange and green after the system's if it complies with "green" standards or if it has a power standby feature. The system then runs power-on tests. While the tests are running, the BIOS alarm beeps or additional messages appear on the screen. If you do not see anything within 30 seconds from the time you turn on the power, the system may have failed a power-on test. Re-check your jumper settings and connections or call your retailer for assistance.

Award BIOS Beep Codes

Beep	Meaning
One short beep when displaying logo	No error during POST
Long beeps in an endless loop	No DRAM installed or detected
One long beep followed by three short beeps	Video card not found or video card memory bad
High frequency beeps when system is working	CPU overheated System running at a lower frequency

3. HARDWARE SETUP

7. During power-on, hold down <Delete> to enter BIOS setup. Follow the instructions in **4. BIOS SETUP**.

- * **Powering Off your computer:** You must first exit or shut down your operating system before switching off the power switch. For ATX power supplies, you can press the ATX power switch after exiting or shutting down your operating system. If you use Windows 9X, click the **Start** button, click **Shut Down**, and then click **Shut down the computer?** The power supply should turn off after Windows shuts down.

NOTE: The message “You can now safely turn off your computer” does not appear when shutting down with ATX power supplies.

4. BIOS SETUP

4.1 Managing and Updating Your BIOS

4.1.1 Upon First Use of the Computer System

It is recommended that you save a copy of the original motherboard BIOS along with a Flash Memory Writer utility (AFLASH.EXE) to a bootable floppy disk in case you need to reinstall the BIOS later. **AFLASH.EXE** is a Flash Memory Writer utility that updates the BIOS by uploading a new BIOS file to the programmable flash ROM on the motherboard. This file works only in DOS mode. To determine the BIOS version of your motherboard, check the last four numbers of the code displayed on the upper left-hand corner of your screen during bootup. Larger numbers represent a newer BIOS file.

1. Type **FORMAT A:/S** at the DOS prompt to create a bootable system floppy disk. **DO NOT** copy AUTOEXEC.BAT and CONFIG.SYS to the disk.

2. Type **COPY D:\AFLASH\AFLASH.EXE A:** (assuming D is your CD-ROM drive) to copy AFLASH.EXE to the just created boot disk.

NOTE: AFLASH works only in DOS mode. It will not work with DOS prompt in Windows and will not work with certain memory drivers that may be loaded when you boot from your hard drive. It is recommended that you reboot using a floppy.

3. Reboot your computer from the floppy disk.

NOTE: BIOS setup must specify "Floppy" as the first item in the boot sequence.

4. In DOS mode, type **A:\AFLASH <Enter>** to run AFLASH.

```

                                ASUS ACPI BIOS
                FLASH MEMORY WRITER V1.24
    Copyright (C) 1994-99, ASUSTeK COMPUTER INC.
    Flash Memory: Winbond W29C020 or SST 29EE020 or Intel 82802AB
    Current BIOS Version: ASUS XXX-XX ACPI BIOS Revision 100X
    BIOS Model       : XXX-XX
    BIOS Built Date   : 09/25/99
    Choose one of the followings:
    1. Save Current BIOS To File
    2. Update BIOS Including Boot Block and ESCD

    Enter Choice: [1]

    Press ESC To Exit
```

IMPORTANT! If "unknown" is displayed after **Flash Memory**., the memory chip is either not programmable or is not supported by the ACPI BIOS and therefore, cannot be programmed by the Flash Memory Writer utility.

4. BIOS SETUP

5. Select **1. Save Current BIOS to File** from the Main menu and press <Enter>. The **Save Current BIOS To File** screen appears.

```
Save Current BIOS To File

Flash Memory: Winbond W29C020 or SST 29EE020 or Intel 82802AB
Current BIOS Version: ASUS XXX-XX ACPI BIOS Revision 100X
BIOS Model          : XXX-XX
BIOS Built Date     : 09/25/99
Please Enter File Name to Save: XXX-XX.XXX

BIOS Saved Successfully

Press ESC To Exit
```

6. Type a filename and the path, for example, **A:\XXX-XX.XXX** and then press <Enter>.

4.1.2 Updating BIOS Procedures

WARNING! Only update your BIOS if you have problems with your motherboard and you know that the new BIOS revision will solve your problems. Careless updating can result in your motherboard having more problems!

1. Download an updated BIOS file from the Internet (WWW or FTP) and save to the disk you created earlier.
2. Boot from the disk you created earlier.
3. At the "A:\\" prompt, type **AFLASH** and then press <Enter>.
4. At the **Main Menu**, type **2** and then press <Enter>. The **Update BIOS Including Boot Block and ESCD** screen appears.
5. Type the filename of your new BIOS and the path, for example, **A:\XXX-XX.XXX**, and then press <Enter>.

NOTE: To cancel this operation, press <Enter>.

```
Update BIOS Including Boot Block and ESCD

Flash Memory: Winbond W29C020 or SST 29EE020 or Intel 82802AB
Current BIOS Version: ASUS XXX-XX ACPI BIOS Revision 100X
BIOS Model          : XXX-XX
BIOS Built Date     : 09/25/99
Please Enter File Name for NEW BIOS: A:\XXX-XX.XXX
```

4. BIOS SETUP

6. When prompted to confirm the BIOS update, press **Y** to start the update.

```
Update BIOS Including Boot Block and ESCD
Flash Memory: Winbond W29C020 or SST 29EE020 or Intel 82802AB

BIOS Version
[Current]  ASUS XXX-XX ACPI BIOS Revision 100X
[test.awd] ASUS XXX-XX ACPI BIOS Revision 100X

BIOS Mode
[Current]   XXX-XX
[test.awd]  XXX-XX

Date of BIOS Built
[Current]   09/25/99
[test.awd]  05/29/00

Check sum of 1001.010 is F266.
Are you sure (Y/N) ? [Y]

Press ESC To Return to Main Menu
```

7. The utility starts to program the new BIOS information into the flash ROM. The boot block will be updated automatically only when necessary. This will minimize the chance that a failed update will prevent your system from booting up. When the programming is finished, **Flashed Successfully** will be displayed.

```
Update BIOS Including Boot Block and ESCD
Flash Memory: Winbond W29C020 or SST 29EE020 or Intel 82802AB

BIOS Version
[Current]  ASUS XXX-XX ACPI BIOS Revision 100X
[test.awd] ASUS XXX-XX ACPI BIOS Revision 100X

BIOS Mode
[Current]   XXX-XX
[test.awd]  XXX-XX

Date of BIOS Built
[Current]   09/25/99
[test.awd]  05/29/00

Check sum of 1001.010 is F266.
Are you sure (Y/N) ? [Y]
Block Erasing  -- Done
Programming    -- 3FFFF
Flashed Successfully

Press ESC To Continue
```

8. Follow the onscreen instructions to continue.

```
ASUS ACPI BIOS
FLASH MEMORY WRITER V1.24
Copyright (C) 1994-99, ASUSTeK COMPUTER INC.

Flash Memory: Winbond W29C020 or SST 29EE020 or Intel 82802AB

Current BIOS Version: ASUS XXX-XX ACPI BIOS Revision 100X
BIOS Model           : XXX-XX
BIOS Built Date      : 09/25/99

Choose one of the followings:
1. Save Current BIOS To File
2. Update BIOS Including Boot Block and ESCD

Enter Choice: [1]

You have flashed the EPROM, It is recommended that you turn off
the power, enter SETUP and LOAD Setup defaults to have CMOS
updated with new BIOS when exits.

Press ESC To Exit
```

WARNING! If you encounter problems while updating the new BIOS, DO NOT turn off your system since this might prevent your system from booting up. Just repeat the process, and if the problem still persists, update the original BIOS file you saved to disk above. If the Flash Memory Writer utility was not able to successfully update a complete BIOS file, your system may not be able to boot up. If this happens, your system will need servicing.

4. BIOS SETUP

4.2 BIOS Setup Program

This motherboard supports a programmable EEPROM that can be updated using the provided utility as described in **4.1 Managing and Updating Your BIOS**.

The utility is used if you are installing a motherboard, reconfiguring your system, or prompted to **“Run Setup”**. This section describes how to configure your system using this utility.

Even if you are not prompted to use the Setup program, at some time in the future you may want to change the configuration of your computer. For example, you may want to enable the Security Password Feature or make changes to the power management settings. It will then be necessary to reconfigure your system using the BIOS Setup program so that the computer can recognize these changes and record them in the CMOS RAM of the EEPROM.

The EEPROM on the motherboard stores the Setup utility. When you start up the computer, the system provides you with the opportunity to run this program. This appears during the Power-On Self Test (POST). Press <Delete> to call up the Setup utility. If you are a little bit late in pressing the mentioned key, POST will continue with its test routines, thus preventing you from calling up Setup. If you still need to call Setup, restart the system by pressing <Ctrl> + <Alt> + <Delete>, or by pressing the Reset button on the system chassis. You can also restart by turning the system off and then back on again. But do so only if the first two methods fail.

The Setup program has been designed to make it as easy to use as possible. It is a menu-driven program, which means you can scroll through the various sub-menus and make your selections among the predetermined choices.

To access the BIOS Setup program, press the <Delete> key after the computer has run through its POST.

NOTE: Because the BIOS software is constantly being updated, the following BIOS screens and descriptions are for reference purposes only and may not reflect your BIOS screens exactly.

4. BIOS SETUP

4.2.1 BIOS Menu Bar

The top of the screen has a menu bar with the following selections:

MAIN	Use this menu to make changes to the basic system configuration.
ADVANCED	Use this menu to enable and make changes to the advanced features.
POWER	Use this menu to configure and enable Power Management features.
BOOT	Use this menu to configure the default system device used to locate and load the Operating System.
EXIT	Use this menu to exit the current menu or specify how to exit the Setup program.

To access the menu bar items, press the right or left arrow key on the keyboard until the desired item is highlighted.

4.2.2 Legend Bar

At the bottom of the Setup screen you will notice a legend bar. The keys in the legend bar allow you to navigate through the various setup menus. The following table lists the keys found in the legend bar with their corresponding alternates and functions.

Navigation Key(s)	Function Description
<F1> or <Alt + H>	Displays the General Help screen from anywhere in the BIOS Setup
<Esc>	Jumps to the Exit menu or returns to the main menu from a sub-menu
← or →(keypad arrow)	Selects the menu item to the left or right
↑ or ↓ (keypad arrow)	Moves the highlight up or down between fields
- (minus key)	Scrolls backward through the values for the highlighted field
+ (plus key) or spacebar	Scrolls forward through the values for the highlighted field
<Enter>	Brings up a selection menu for the highlighted field
<Home> or <PgUp>	Moves the cursor to the first field
<End> or <PgDn>	Moves the cursor to the last field
<F5>	Resets the current screen to its Setup Defaults
<F10>	Saves changes and exits Setup

4. BIOS SETUP

General Help

In addition to the Item Specific Help window, the BIOS setup program also provides a General Help screen. This screen can be called up from any menu by simply pressing <F1> or the <Alt> + <H> combination. The General Help screen lists the legend keys with their corresponding alternates and functions.

Saving Changes and Exiting the Setup Program

See 4.7 Exit Menu for detailed information on saving changes and exiting the setup program.

Scroll Bar

When a scroll bar appears to the right of a help window, it indicates that there is more information to be displayed that will not fit in the window. Use <PgUp> and <PgDn> or the up and down arrow keys to scroll through the entire help document. Press <Home> to display the first page, press <End> to go to the last page. To exit the help window, press <Enter> or <Esc>.

Sub-Menu

Note that a right pointer symbol ► appears to the left of certain fields. This pointer indicates that a sub-menu can be launched from this field. A sub-menu contains additional options for a field parameter. To call up a sub-menu, simply move the highlight to the field and press <Enter>. The sub-menu will then immediately appear. Use the legend keys to enter values and move from field to field within a sub-menu just as you would within a menu. Use the <Esc> key to return to the main menu. Take some time to familiarize yourself with each of the legend keys and their corresponding functions. Practice navigating through the various menus and sub-menus. If you accidentally make unwanted changes to any of the fields, use the set default hot key <F5>. While moving around through the Setup program, note that explanations appear in the Item Specific Help window located to the right of each menu. This window displays the help text for the currently highlighted field.

NOTE: The item heading in square brackets represents the default setting for that field.

4. BIOS SETUP

4.3 Main Menu

When the Setup program is accessed, the following screen appears:

Main...	
System Time:	[14:26:36]
System Date:	[08/01/2000]
Legacy Diskette A:	[1.44M, 3.5 in.]
Legacy Diskette B:	[None]
► Primary Master	[Auto]
► Primary Slave	[Auto]
► Secondary Master	[Auto]
► Secondary Slave	[Auto]
► Keyboard Features	
Language	[English]
Supervisor Password	[Disabled]
User Password	[Disabled]
Halt On	[All Errors]
Installed Memory	256MB

F1 Help	↕ Select Item	-/+ Change Values	F5 Setup Defaults
ESC Exit	↔ Select Menu	Enter Select ► Submenu	F10 Save and Exit

System Time [XX:XX:XX]

Sets your system to the time that you specify (usually the current time). The format is hour, minute, second. Valid values for hour, minute and second are **Hour: (00 to 23), Minute: (00 to 59), Second: (00 to 59)**. Use the <Tab> or <Shift> + <Tab> keys to move between the hour, minute, and second fields.

System Date [XX/XX/XXXX]

Sets your system to the date that you specify (usually the current date). The format is month, day, year. Valid values for month, day, and year are Month: (1 to 12), Day: (1 to 31), Year: (100 year range). Use the <Tab> or <Shift> + <Tab> keys to move between the month, day, and year fields.

Legacy Diskette A [1.44M, 3.5 in.], Legacy Diskette B [None]

Sets the type of floppy drives installed. Configuration options: [None] [360K, 5.25 in.] [1.2M , 5.25 in.] [720K , 3.5 in.] [1.44M, 3.5 in.] [2.88M, 3.5 in.]

4. BIOS SETUP

4.3.1 Primary & Secondary Master/Slave

Main...		
Primary Master [Auto]		Item Specific Help
Type	[Auto]	
Cylinders	[1026]	
Head	[255]	
Sector	[63]	
CHS Capacity	84228MB	
Maximum LBA Capacity	25598MB	
Multi-Sector Transfers	[Maximum]	
Smart Monitoring	[Disabled]	
PiO Mode	[4]	
Ultra DMA Mode	[2]	
F1 Help	↑↓ Select Item	-/+ Change Values
ESC Exit	↔ Select Menu	Enter Select ► Submenu
		F5 Setup Defaults
		F10 Save and Exit

NOTE: Before attempting to configure a hard disk drive, make sure you have the configuration information supplied by the manufacturer of the drive. Incorrect settings may cause your system to not recognize the installed hard disk. To allow the BIOS to detect the drive type automatically, select [Auto].

Type [Auto]

Select [Auto] to automatically detect an IDE hard disk drive. If automatic detection is successful, the correct values will be filled in for the remaining fields on this sub-menu. If automatic detection fails, your hard disk drive may be too old or too new. You can try updating your BIOS or enter the IDE hard disk drive parameters manually.

NOTE: After the IDE hard disk drive information has been entered into BIOS, new IDE hard disk drives must be partitioned (such as with FDISK) and then formatted before data can be read from and write on. Primary IDE hard disk drives must have its partition set to active (also possible with FDISK).

Other options for the **Type** field are:

[None] - to disable IDE devices

4. BIOS SETUP

IMPORTANT: If your hard disk was already formatted on an older previous system, incorrect parameters may be detected. You will need to enter the correct parameters manually or use low-level format if you do not need the data stored on the hard disk. If the parameters listed differ from the ones used when the disk was formatted, the disk will not be readable. If the auto-detected parameters do not match the ones that should be used for your disk, you should enter the correct ones manually by setting [User Type HDD].

Main...		
Primary Master [User Type HCC]		
Type	[User Type]	
Translation Method	[LBA]	
Cylinders	[1024]	
Head	[255]	
Sector	[63]	
CHS Capacity	84228MB	
Maximum LBA Capacity	25598MB	
Multi-Sector Transfers	[Maximum]	
SMART Monitoring	[Disabled]	
PIO Mode	[6]	
Ultra DMA Mode	[2]	
F1 Help	↑↓ Select Item	-/+ Change Values
ESC Exit	↔ Select Menu	Enter Select ► Submenu
		F5 Setup Defaults
		F10 Save and Exit

[User Type HDD]

Manually enter the number of cylinders, heads and sectors per track for your drive. Refer to your drive documentation or look on the drive for this information. If no drive is installed or if you are removing a drive and not replacing it, select [None].

Translation Method [LBA]

Select the hard disk drive type in this field. When Logical Block Addressing is enabled, 28-bit addressing of the hard drive is used without regard for cylinders, heads, or sectors. Note that LBA Mode is necessary for drives with greater than 504MB in storage capacity. Configuration options: [LBA] [LARGE] [Normal] [Match Partition Table] [Manual]

Cylinders

This field configures the number of cylinders. Refer to your drive documentation to determine the correct value to enter into this field. **NOTE:** To make changes to this field, the **Type** field must be set to [User Type HDD] and the **Translation Method** field must be set to [Manual].

4. BIOS SETUP

Head

This field configures the number of read/write heads. Refer to your drive documentation to determine the correct value to enter into this field. **NOTE:** To make changes to this field, the **Type** field must be set to [User Type HDD] and the **Translation Method** field must be set to [Manual].

Sector

This field configures the number of sectors per track. Refer to your drive documentation to determine the correct value to enter into this field. **NOTE:** To make changes to this field, the **Type** field must be set to [User Type HDD] and the **Translation Method** field must be set to [Manual].

CHS Capacity

This field shows the drive's maximum CHS capacity calculated automatically by the BIOS from the drive information you entered.

Maximum LBA Capacity

This field shows the drive's maximum LBA capacity calculated automatically by the BIOS from the drive information you entered.

Multi-Sector Transfers [Maximum]

This option automatically sets the number of sectors per block to the highest number supported by the drive. This field can also be configured manually. Note that when this field is automatically configured, the set value may not always be the fastest value for the drive. Refer to the documentation that came with your hard drive to determine the optimal value and set it manually.

NOTE: To make changes to this field, the **Type** field must be set to [User Type HDD]. Configuration options: [Disabled] [2 Sectors] [4 Sectors] [8 Sectors] [16 Sectors] [32 Sectors] [Maximum]

SMART Monitoring [Disabled]

This allows the enabling or disabling of the S.M.A.R.T. (Self-Monitoring, Analysis and Reporting Technology) system which utilizes internal hard disk drive monitoring technology. This feature is normally disabled because system resources used in this feature may decrease system performance. Configuration options: [Disabled] [Enabled]

PIO Mode [4]

This option lets you set a PIO (Programmed Input/Output) mode for the IDE device. Modes 0 through 4 provide successively increased performance. Configuration options: [0] [1] [2] [3] [4]

Ultra DMA Mode [Disabled]

Ultra DMA capability allows improved transfer speeds and data integrity for compatible IDE devices. Set to [Disabled] to suppress Ultra DMA capability. **NOTE:** To make changes to this field, the **Type** field must be set to [User Type HDD]. Configuration options vary according to your device.

4. BIOS SETUP

Other options for “Type:” are:

[CD-ROM] - for IDE CD-ROM drives

[LS-120] - for LS-120 compatible floppy disk drives

[ZIP-100] - for ZIP-100 compatible disk drives

[MO] - for IDE magneto optical disk drives

[Other ATAPI Device] - for IDE devices not listed here

After using the legend keys to make your selections on this sub-menu, press the <Esc> key to exit back to the Main menu. When the Main menu appears, you will notice that the drive size appear in the field for the hard disk drive that you just configured.

4.3.2 Keyboard Features

Main...	
Keyboard Features	
Boot Up NumLock Status [On] Keyboard Auto-Repeat Rate [12/Sec] Keyboard Auto-Repeat Delay [1/4 Sec]	Item Specific Help
F1 Help ↑↓ Select Item -/+ Change Values F5 Setup Defaults ESC Exit ←→ Select Menu Enter Select ► Submenu F10 Save and Exit	

Boot Up NumLock Status [On]

This field enables users to activate the Number Lock function upon system boot. Configuration options: [Off] [On]

Keyboard Auto-Repeat Rate [12/Sec]

This controls the speed at which the system registers repeated keystrokes. Options range from 6 to 30 characters per second. Configuration options: [6/Sec] [8/Sec] [10/Sec] [12/Sec] [15/Sec] [20/Sec] [24/Sec] [30/Sec]

Keyboard Auto-Repeat Delay [1/4 Sec]

This field sets the time interval for displaying the first and second characters. Configuration options: [1/4 Sec] [1/2 Sec] [3/4 Sec] [1 Sec]

4. BIOS SETUP

Language [English]

This allows selection of the BIOS' displayed language. Currently only English is available.

Supervisor Password [Disabled] / User Password [Disabled]


These fields allow you to set the passwords. To set the password, highlight the appropriate field and press <Enter>. Type in a password and press <Enter>. You can type up to eight alphanumeric characters. Symbols and other keys are ignored. To confirm the password, type the password again and press the <Enter>. The password is now set to [Enabled]. This password allows full access to the BIOS Setup menus. To clear the password, highlight this field and press <Enter>. The same dialog box as above will appear. Press <Enter> and the password will be set to [Disabled].

A Note about Passwords

The BIOS Setup program allows you to specify passwords in the Main menu. The passwords control access to the BIOS during system startup. The passwords are not case sensitive. In other words, it makes no difference whether you enter a password using upper or lowercase letters. The BIOS Setup program allows you to specify two separate passwords: a Supervisor password and a User password. When disabled, anyone may access all BIOS Setup program functions. When enabled, the Supervisor password is required for entering the BIOS Setup program and having full access to all configuration fields.

Forgot the Password?

If you forgot the password, you can clear the password by erasing the CMOS Real Time Clock (RTC) RAM. The RAM data containing the password information is powered by the onboard button cell battery. To erase the RTC RAM: (1) Unplug your computer, (2) Short the solder points, (3) Turn ON your computer, (4) Hold down <Delete> during bootup and enter BIOS setup to re-enter user preferences.

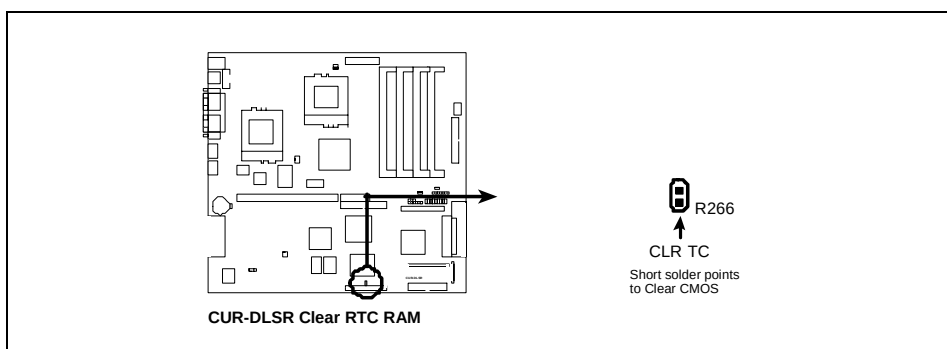

Halt On [All Errors]

This field determines which types of errors will cause the system to halt. Configuration options: [All Errors] [No Error] [All but Keyboard] [All but Disk] [All but Disk/Keyboard]

Installed Memory [XXX MB]

This display-only field displays the amount of conventional memory detected by the system during bootup. You do not need to make changes to this field.

4. BIOS SETUP

4.4 Advanced Menu

Advanced ...	
CPU Level 1 Cache	[Enabled]
Cpu Level 2 Cache	[Enabled]
CPU Level 2 Cache ECC Check	[Dislabled]
Processor Serial Number	[Dislabled]
BIOS Update	[Enabled]
PS/2 Mouse Function Control	[Auto]
OS/2 Onboard Memory > 64M	[Dislabled]
► Chip Configuration	
► I/O Device Configuration	
► PCI Cofiguration	
► Shadow Cofiguration	
F1 Help ↑↓ Select Item -/+ Change Values F5 Setup Defaults ESC Exit ←→ Select Menu Enter Select ► Submenu F10 Save and Exit	

CPU Level 1 Cache, CPU Level 2 Cache [Enabled]

These fields allow you to choose from the default of [Enabled] or choose [Disabled] to turn on or off the CPU's Level 1 and Level 2 built-in cache. Configuration options: [Disabled] [Enabled]

CPU Level 2 Cache ECC Check [Disabled]

This function controls the ECC capability in the CPU level 2 cache. Configuration options: [Disabled] [Enabled]

Processor Serial Number [Disabled]

The Processor Serial Number is a unique number that is added to every Pentium III processor to help verify the identity of the user across the Internet. Set this field to [Enabled] when you need increased security for doing business online or e-commerce. Otherwise, leave it to its default setting of [Disabled] for greater anonymity when surfing the Internet. **NOTE:** This field is available only when a Pentium III processor is installed in your system.

BIOS Update [Enabled]

This functions as an update loader integrated into the BIOS to supply the processor with the required data. In the default position of [Enabled], the BIOS will load the update on all processors during system bootup. Configuration options: [Disabled] [Enabled]

4. BIOS SETUP

PS/2 Mouse Function Control [Auto]

The default of [Auto] allows the system to detect a PS/2 mouse on startup. If detected, IRQ12 will be used for the PS/2 mouse. IRQ12 will be reserved for expansion cards only if a PS/2 mouse is not detected. [Enabled] will always reserve IRQ12, whether on startup a PS/2 mouse is detected or not. Configuration options: [Enabled] [Auto]

OS/2 Onboard Memory > 64M [Disabled]

When using OS/2 operating systems with installed DRAM of greater than 64MB, you need to set this option to [Enabled]; otherwise, leave this on [Disabled]. Configuration options: [Disabled] [Enabled]

4.4.1 Chip Configuration

Advanced . . .			
Chip Configuration		Item Specific Help	
Video Memory Cache Mode [UC] Onboard PCI IDE Enable [Both]			
F1 Help ESC Exit	↑↓ Select Item ↔ Select Menu	-/+ Change Values Enter Select ► Submenu	F5 Setup Defaults F10 Save and Exit

Video Memory Cache Mode [UC]

USWC (uncacheable, speculative write combining) is a new cache technology for the video memory of the processor. It can greatly improve the display speed by caching the display data. You must set this to UC (uncacheable) if your display card cannot support this feature; otherwise your system may not boot. Configuration options: [UC] [USWC]

Onboard PCI IDE Enable [Both]

You can select to enable the primary IDE channel, both the primary and secondary channels, or disable both channels. Configuration options: [Both] [Primary] [Disabled]

4. BIOS SETUP

4.4.2 I/O Device Configuration

Advanced ...	
I/O Device Configuration	Item Specific Help
Floppy Disk Access Control [R/W] Onboard Serial Port 1 [3F8H/IRQ4] Onboard Serial Port 2 [2F8H/IRQ3] Onboard Parallel Port [378H/IRQ7] Parallel Port Mode [ECP+EPP] ECP DMA Select [3]	
F1 Help ↑↓ Select Item -/+ Change Values F5 Setup Defaults ESC Exit ←↔ Select Menu Enter Select ► Submenu F10 Save and Exit	

Floppy Disk Access Control [R/W]

When set to [Read Only], this field protects files from being copied to floppy disks by allowing reads from the floppy disk drive but not writes. The setup default [R/W] allows both reads and writes.

Configuration options: [R/W] [Read Only]

Onboard Serial Port 1 [3F8H/IRQ4]

Onboard Serial Port 2 [2F8H/IRQ3]

These fields allow you to set the addresses for the onboard serial connectors. Serial Port 1 and Serial Port 2 must have different addresses. Configuration options: [3F8H/IRQ4] [2F8H/IRQ3] [3E8H/IRQ4] [2E8H/IRQ10] [Disabled]

Onboard Parallel Port [378H/IRQ7]

This field sets the address of the onboard parallel port connector. If you disable this feature, Parallel Port Mode and ECP DMA Select configurations will not be available. Configuration options: [Disabled] [378H/IRQ7] [278H/IRQ5]

Parallel Port Mode [ECP+EPP]

This field allows you to set the operation mode of the parallel port. [Normal] allows normal-speed operation but in one direction only; [EPP] allows bidirectional parallel port operation; [ECP] allows the parallel port to operate in bidirectional DMA mode; [ECP+EPP] allows normal speed operation in a two-way mode. Configuration options: [Normal] [EPP] [ECP] [ECP+EPP]

4. BIOS SETUP

ECP DMA Select [3]

This field allows you to configure the parallel port DMA channel for the selected ECP mode. This selection is available only if you select [ECP] or [ECP+EPP] in Parallel Port Mode above.

Configuration options: [1] [3] [Disabled]

4.4.3 PCI Configuration

Advanced ...	
PCI Configuration	Item Specific Help
Slot 1 IRQ [Auto] Slot 2 IRQ [Auto] Slot 3 IRQ [Auto] PCI Latency Timer [32] Onboard SCSI BIOS [Auto] ONB SCSI BIOS First [No] ONB Primary SCSI Term [Enabled] ONB Secondary SCSI Term [Enabled] USB Function [Enabled] ONB VGA BIOS First [No] Onboard LAN Boot ROM [Disabled]	
F1 Help ↑↓ Select Item -/+ Change Values F5 Setup Defaults ESC Exit ↔ Select Menu Enter Select ► Submenu F10 Save and Exit	

Slot 1, Slot 2, Slot 3 IRQ [Auto]

These fields set how IRQ use is determined for each PCI slot. The default setting for each field is [Auto], which utilizes auto-routing to determine IRQ use. Configuration options: [Auto] [NA] [3] [4] [5] [7] [9] [10] [11] [12] [14] [15]

PCI Latency Timer [32]

Leave on default setting for best performance vs. stability.

4. BIOS SETUP

Onboard SCSI BIOS [Auto]

[Auto] allows the motherboard's BIOS to detect whether you have a Symbios SCSI controller. If the Symbios SCSI controller is detected, the motherboard's Symbios BIOS will be enabled; if no Symbios SCSI controller is detected, the onboard Symbios SCSI BIOS will be disabled. [Disabled] will disable the motherboard's Symbios SCSI BIOS so that the BIOS on an add-on Symbios SCSI card can be used. If your Symbios SCSI card does not have a BIOS, the Symbios SCSI card will not function. Configuration options: [Auto] [Disabled]

ONB SCSI BIOS First [No]

This field allows giving priority to the onboard SCSI BIOS for SCSI functions over other SCSI controllers. Configuration options: [No] [Yes]

ONB Primary SCSI Term, ONB Secondary SCSI Term [Enabled]

These fields allow you to enable or disable the onboard SCSI termination on the primary and secondary SCSI channels. Configuration options: [Enabled] [Disabled]

ONB VGA BIOS First [No]

This field, when set to [Yes], gives priority to the onboard VGA BIOS over other VGA controllers. Configuration options: [No] [Yes]

Onboard LAN Boot ROM [Disabled]

When set to [Enabled], this field allows your computer to boot from the network using the onboard LAN controller boot ROM. Configuration options: [Disabled] [Enabled]

4. BIOS SETUP

4.4.4 Shadow Configuration

Advanced ...	
Shadow Configuration	Item Specific Help
Video ROM BIOS Shadow [Enabled] C8000-C8FFF Shadow [Disabled] CC000-CFFFF Shadow [Disabled] D0000-D0FFF Shadow [Disabled] D4000-D7FFF Shadow [Disabled] D8000-D8FFF Shadow [Disabled] DC000-DFFFF Shadow [Disabled]	
F1 Help ↑↓ Select Item -/+ Change Values F5 Setup Defaults ESC Exit ↔ Select Menu Enter Select ► Submenu F10 Save and Exit	

Video ROM BIOS Shadow [Enabled]

This field allows you to change the video BIOS location from ROM to RAM. Relocating to RAM enhances system performance, as information access is faster than the ROM. Configuration options: [Disabled] [Enabled]

C8000-DFFFF Shadow [Disabled]

These fields are used for shadowing other expansion card ROMs. If you install other expansion cards with ROMs on them, you will need to know which addresses the ROMs use to shadow them specifically. Shadowing a ROM reduces the memory available between 640K and 1024K by the amount used for this purpose. Configuration options: [Disabled] [Enabled]

4. BIOS SETUP

4.5 Power Menu

The Power menu allows you to reduce power consumption. This feature turns off the video display and shuts down the hard disk after a period of inactivity.

Power ...		
Power Management	[User Defined]	
Video Off Option	[Suspend -> Off]	
Video Off Method	[DPMS OFF]	
HDD Power Down	[Disabled]	
Suspend Mode	[Disabled]	
▶ Power Up Control		
▶ Hardware Monitor		
F1 Help	↑↓ Select Item	-/+ Change Values
ESC Exit	↔ Select Menu	Enter Select ▶ Submenu
		F5 Setup Defaults
		F10 Save and Exit

Power Management [User Define]

This option must be enabled to use any of the automatic power saving features. If this menu item is set to [Disabled], power management features will not function regardless of other field settings on this menu. The [User Define] option allows you to make your own selections in the Power menu. When set to [Max Saving], system power will be conserved to its greatest amount. **The Suspend Mode** field will then be set to predefined value that ensures maximum power savings.

This field acts as the master control for the power management modes. [Max Saving] puts the system into power saving mode after a brief period of system inactivity; [Min Saving] is almost the same as [Max Saving] except that the system inactivity period is longer; [Disabled] disables the power saving features; [User Define] allows you to set power saving options according to your preference. Configuration options: [User Define] [Disabled] [Min Saving] [Max Saving]

IMPORTANT: Advanced Power Management (APM) should be installed to keep the system time updated when the computer enters suspend mode activated by the BIOS Power Management. For DOS environments, you need to add the statement, DEVICE=C:\DOS\POWER.EXE, to your CONFIG.SYS file. For Windows 3.x and Windows 95, you need to install Windows with the APM feature. For Windows 98 and later, APM is automatically installed. A battery and power cord icon labeled "Power Management" will appear in the "Control Panel." Choose "Advanced" in the Power Management Properties dialog box.

4. BIOS SETUP

Video Off Option [Suspend > Off]

This field determines when to activate the video off feature for monitor power management. Configuration options: [Always On] [Suspend > Off]

Video Off Method [DPMS OFF]

This field defines the video off features. The DPMS (Display Power Management System) feature allows the BIOS to control the video display card if it supports the DPMS feature. [Blank Screen] only blanks the screen (use this for monitors without power management or “green” features. If set up in your system, your screen saver will not display with [Blank Screen] selected). [V/ H SYNC+Blank] blanks the screen and turns off vertical and horizontal scanning. Configuration options: [Blank Screen] [V/H SYNC+Blank] [DPMS Standby] [DPMS Suspend] [DPMS OFF] [DPMS Reduce ON]

HDD Power Down [Disabled]

Shuts down any IDE hard disk drives in the system after a period of inactivity as set in this user-configurable field. This feature does not affect SCSI hard drives. Configuration options: [Disabled] [1 Min] [2 Min] [3 Min]...[15 Min]

Suspend Mode [Disabled]

This sets the time period before the system goes into suspend mode. Configuration options: [Disabled] [1~2 Min] [2~3 Min]...[1 Hour]

4. BIOS SETUP

4.5.1 Power Up Control

Power ...	
Power Up Control	Item Specific Help
AC PWR Loss Restart [Disabled] PWR Up On Modem Act [Enabled] Wake On LAN [Disabled] Automatic Power Up [Disabled]	
F1 Help ↑↓ Select Item -/+ Change Values F5 Setup Defaults ESC Exit ←→ Select Menu Enter Select ► Submenu F10 Save and Exit	

AC PWR Loss Restart [Disabled]

This allows you to set whether you want your system to reboot after the power has been interrupted. [Disabled] leaves your system off and [Enabled] resets your system. Configuration options: [Disabled] [Enabled]

PWR Up On Modem Act [Enabled]

This allows either settings of [Enabled] or [Disabled] for powering up the computer when the modem receives a call while the computer is in Soft-off mode. **NOTE:** The computer cannot receive or transmit data until the computer and applications are fully running. Thus connection cannot be made on the first try. Turning an external modem off and then back on while the computer is off causes an initialization string that will also cause the system to power on. Configuration options: [Disabled] [Enabled]

Wake On LAN [Disabled]

Wake-On-LAN allows your computer to be booted from another computer via a network by sending a wake-up frame or signal. Configuration options: [Disabled] [Enabled]

IMPORTANT: This feature requires an optional network interface card with Wake-On-LAN and an ATX power supply with at least 720mA +5V standby power.

4. BIOS SETUP

Automatic Power Up [Disabled]

This allows an unattended or automatic system power up. You may configure your system to power up at a certain time of the day by selecting [Everyday] or at a certain time and day by selecting [By Date]. **NOTE:** Automatic Power Up will not work if the system is powered down by operating systems, such as Windows 98, which have ACPI support enabled. Configuration options: [Disabled] [Everyday] [By Date]

4. BIOS SETUP

4.5.2 Hardware Monitor

Power ...		
Hardware Monitor		
MB	Temperature	xx°C/xxx°F
CPU1	Temperature	50°C/122°F
CPU2	Temperature	54°C/129°F
CPU1	Fan Speed	7506RPM
CPU2	Fan Speed	7676RPM
Chassis1	Fan Speed	
Chassis2	Fan Speed	
VCORE1	Voltage	1,65V
VCORE2	Voltage	1,65V
+3,3V	Voltage	3,34V
+5V	Voltage	4,99V
+12V	Voltage	12,00V
-12V	Voltage	-12,00V
-5V	Voltage	-5,00V
F1 Help	↕ Select Item	-/+ Change Values
ESC Exit	↔ Select Menu	Enter Select ► Submenu
		F5 Setup Defaults
		F10 Save and Exit

MB Temperature [xxx°C/xxx°F]

CPU1 Temperature [xxx°C/xxx°F]

CPU2 Temperature [xxx°C/xxx°F]

The onboard hardware monitor is able to detect the MB (motherboard) and CPU temperatures. Set to [Ignore] only if necessary.

CPU1 Fan Speed [xxxxRPM]

CPU2 Fan Speed [xxxxRPM]

Chassis1 Fan Speed [xxxxRPM]

Chassis2 Fan Speed [xxxxRPM]

The onboard hardware monitor is able to detect the CPU fan speed and the chassis fan speed in rotations per minute (RPM). The presence of the fans is automatically detected. Set to [Ignore] only if necessary.

VCORE1 Voltage, VCORE2 Voltage, +3.3V Voltage, +5V Voltage, +12V Voltage, -12V Voltage, -5V Voltage [xx.xV]

The onboard hardware monitor is able to detect the voltage output by the onboard voltage regulators. Set to [Ignore] only if necessary. **NOTE:** If any of the monitored items is out of range, an error message will appear: "Hardware Monitor found an error. Enter Power setup menu for details". You will then be prompted to "Press **F1** to continue, **DEL** to enter SETUP".

4. BIOS SETUP

4.6 Boot Menu

Boot ...	
	Item Specific Help
1. Removable Device [Legacy Floppy] 2. IDE Hard Drive [None] 3. ATAPI CD-ROM [CD-S500/A] 4. Other Boot device [INT18 Device (Network)] Plug & Play O/S [No] MPS 1.4 Support [Enabled] Boot Virus Detection [Enabled] Quick Power On Self Test [Enabled] Boot Up Floppy Seek [Enabled]	
F1 Info ...	

Boot Sequence

The Boot menu allows you to select among the four possible types of boot devices listed using the up and down arrow keys. By using the <+> or <Space> key, you can promote devices and by using the <-> key, you can demote devices. Promotion or demotion of devices alters the priority which the system uses to search for a boot device on system power up. Configuration fields include **Removable Devices**, **IDE Hard Drive**, **ATAPI CD-ROM**, and **Other Boot Device**.

Removable Device [Legacy Floppy]

Configuration options: [Disabled] [Legacy Floppy] [LS120] [ZIP-100] [ATAPI MO]

IDE Hard Drive

This field allows you to select which IDE hard disk drive to use in the boot sequence. Pressing [Enter] will show the product IDs of all connected IDE hard disk drives.

ATAPI CD-ROM

This field allows you to select which ATAPI CD-ROM drive to use in the boot sequence. Pressing [Enter] will show the product IDs of all your connected ATAPI CD-ROM drives.

Other Boot Device Select [INT18 Device (Network)]

Configuration options: [Disabled] [SCSI Boot Device] [INT18 Device (Network)]

4. BIOS SETUP

Plug & Play O/S [No]

This field allows you to use a Plug-and-Play (PnP) operating system to configure the PCI bus slots instead of using the BIOS. When [Yes] is selected, interrupts may be reassigned by the OS. When a non-PnP OS is installed or you want to prevent reassigning of interrupt settings, select the default setting of [No]. Configuration options: [No] [Yes]

MPS 1.4 Support [Enabled]

This field allows you to enable or disable the MultiProcessor Specification 1.4 support. Configuration options: [Disabled] [Enabled]

Boot Virus Detection [Enabled]

This field allows you to set boot virus detection, ensuring a virus-free boot sector. The system halts and displays a warning message when it detects a virus. If this occurs, you can either allow the operation to continue or use a virus-free bootable floppy disk to restart and investigate your system. Configuration options: [Disabled] [Enabled]

Quick Power On Self Test [Enabled]

This field speeds up the Power-On-Self Test (POST) routine by skipping retesting a second, third, and fourth time. Configuration options: [Disabled] [Enabled]

Boot Up Floppy Seek [Enabled]

When enabled, the BIOS seeks the floppy disk drive once during bootup. Configuration options: [Disabled] [Enabled]

4. BIOS SETUP

4.7 Exit Menu

Once you have made all of your selections from the various menus in the Setup program, you should save your changes and exit Setup. Select Exit from the menu bar to display the following menu:

NOTE: Pressing <Esc> does not exit this menu. You must select one of the options from this menu or <F10> from the legend bar to exit this menu.

Exit	
Exit Saving Changes Exit Discarding Changes Load setup defaults Discard Changes Save Changes	Item Specific Help
F1 Help ↑ Select Item -/+ Change Values F5 Setup Defaults ESC Exit ← Select Menu Enter Select ► Submenu F10 Save and Exit	

Exit Saving Changes

Once you are finished making your selections, choose this option from the Exit menu to ensure the values you selected are saved to the CMOS RAM. The CMOS RAM is sustained by an onboard backup battery and stays on even when the PC is turned off. Once this option is selected, a confirmation is asked. Select [Yes] to save changes and exit.

NOTE: If you attempt to exit the Setup program without saving your changes, the program will prompt you with a message asking if you want to save your changes before exiting. Pressing <Enter> will then save changes while exiting.

Exit Discarding Changes

This option should only be used if you do not want to save the changes you have made to the Setup program. If you have made changes to fields other than system date, system time, and password, the system will ask for confirmation before exiting.

4. BIOS SETUP

Load Setup Defaults

This option allows you to load the default values for each of the parameters on the Setup menus. When this option is selected or if <F5> is pressed, a confirmation is requested. Select [Yes] to load default values. You can now select **Exit Saving Changes** or make other changes before saving the values to the non-volatile RAM.

Discard Changes

This option allows you to discard the selections you made and restore the values you previously saved. After selecting this option, a confirmation is requested. Select [Yes] to discard any changes and load the previously saved values.

Save Changes

This option saves your selections without exiting the Setup program. You can then return to other menus and make changes. After selecting this option, all selections are saved and a confirmation is requested. Select [Yes] to save any changes to the non-volatile RAM.